



LEGO Prisoner Transport Van Circuit Mod

After building your LEGO Prisoner Transport Van, follow this step-by-step guide to add an LED circuit with components from your Crazy Circuits Starter Set!

Written By: Andy Wallus



INTRODUCTION

After building your LEGO Prisoner Transport Van, follow this step-by-step guide to add an LED circuit with components from your Crazy Circuits Starter Set!

TOOLS:

- Scissors (1)

PARTS:



- LEGO Prisoner Transport Set 7286 (1)
- Crazy Circuits LED Chip (2)
Blue, Red
- Crazy Circuits Coin Cell Battery Holder (1)
- Crazy Circuits Blink/Fade Board (1)
- CR2032 Battery (1)
- Maker Tape (1)
1/8" Wide

Step 1 — Modify standard build



- **Removal of the parts pictured** is the only modification required on the standard completed build. This will create the needed area for your circuit.

Step 2 — Prepare circuit

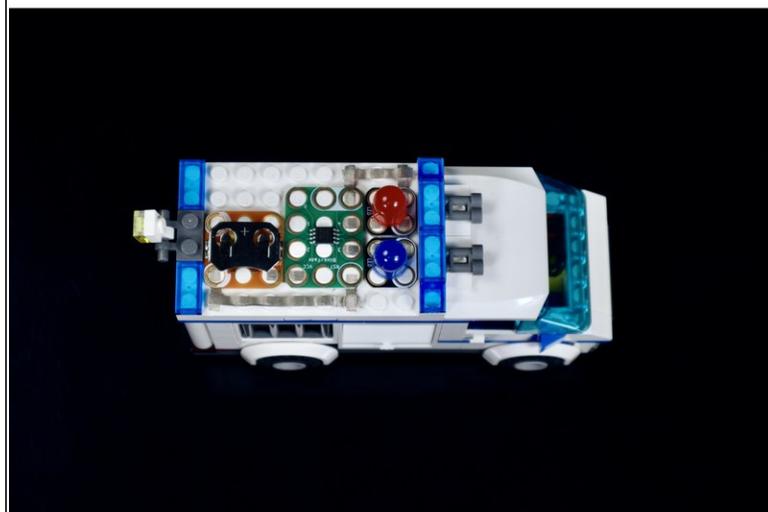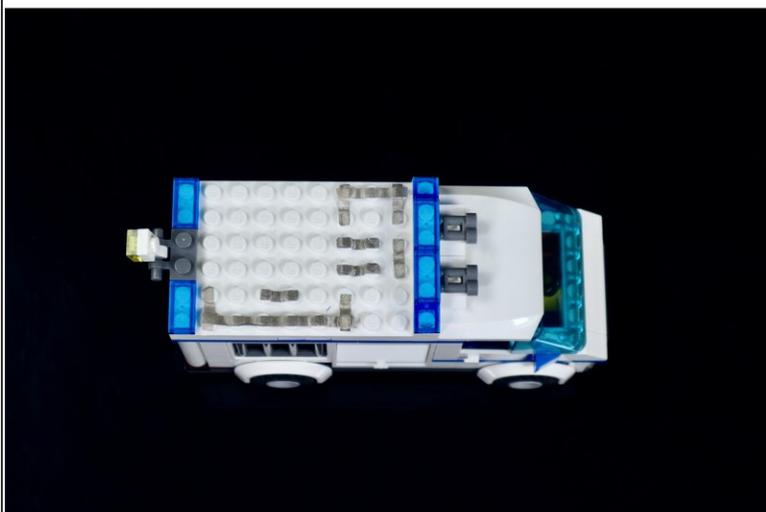

- **Measure, cut, peel and stick** tape paths as pictured both here and the attached diagram.
- Use the second photo and the attached diagram to help you **position and press the circuit components into place**.

Step 3



- <https://www.youtube.com/watch?v=yQQ0HAaN...>