




LEGO X-Wing

Learn how to automate a LEGO X-Wing for motion, light, and sound using Crazy Circuits.

Written By: Joshua

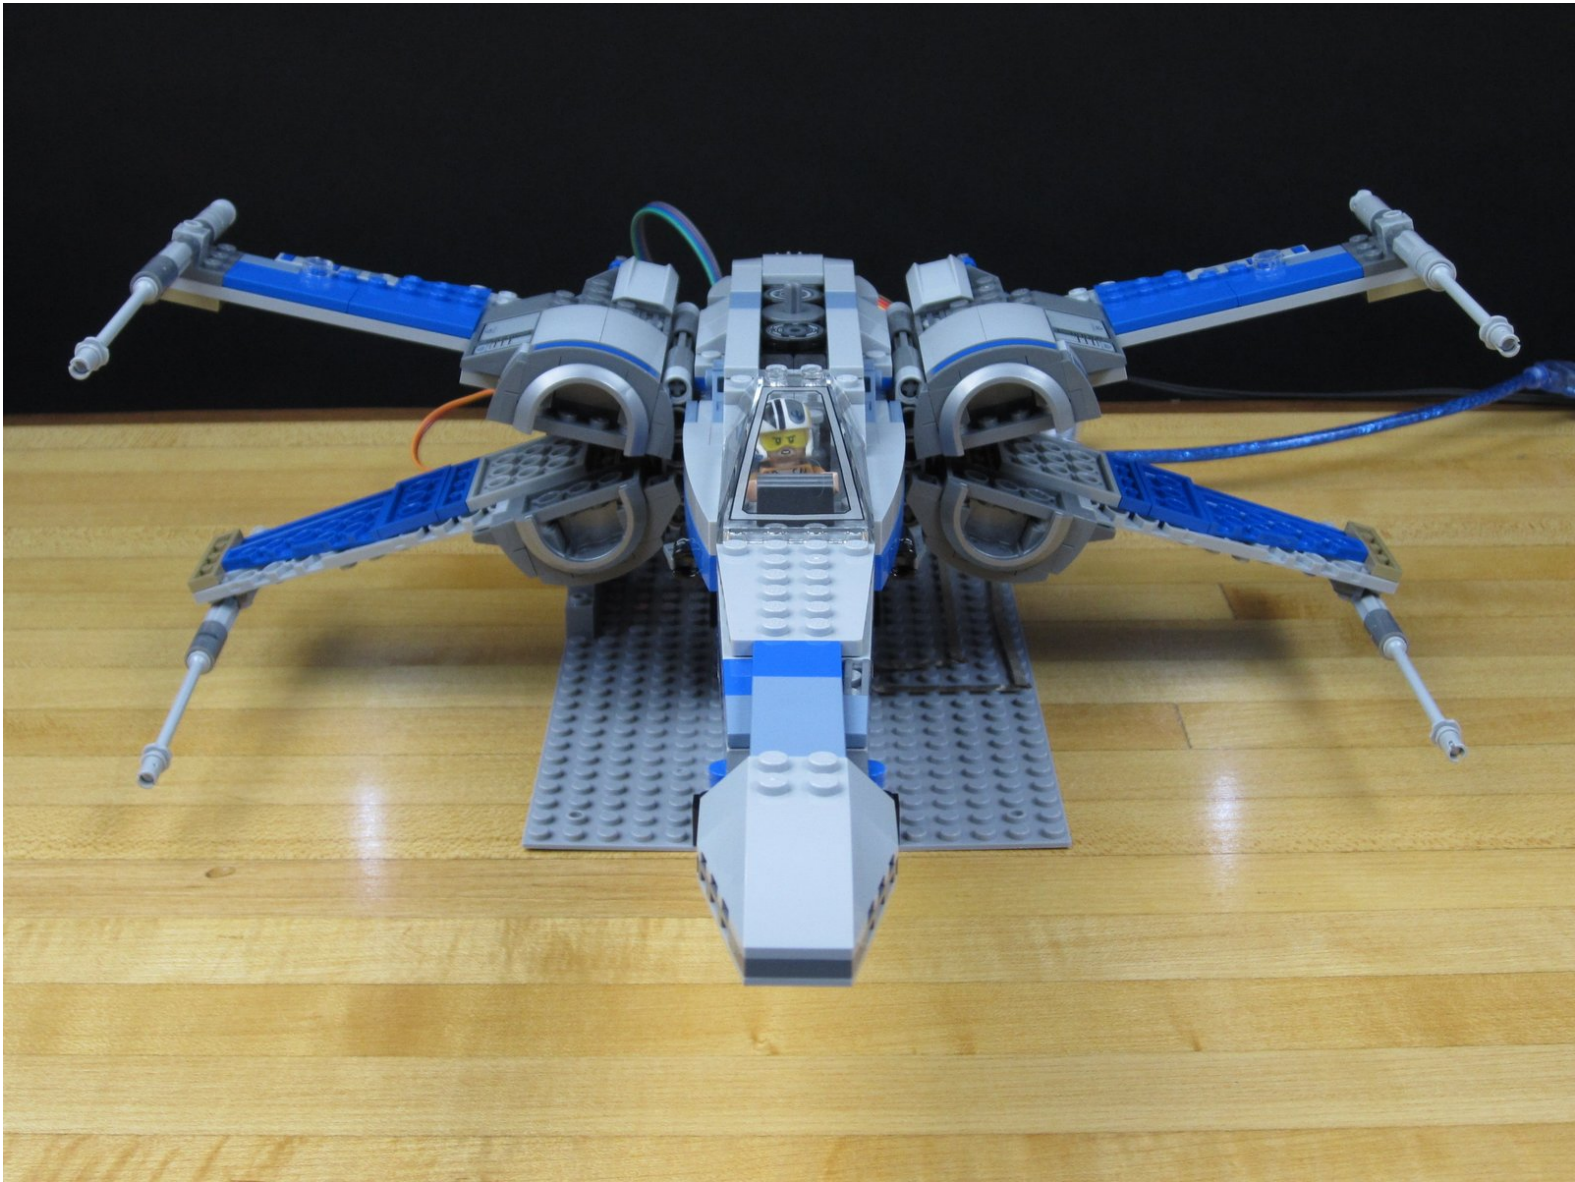

INTRODUCTION

We absolutely LOVE the new LEGO Star Wars sets that have come out over the last couple of years. They're well designed, fun to build, and look great. What would make them even *more* fun is if they also moved on their own!

We took an off the shelf LEGO X-Wing set and automated it so the wings open and close on their own. Even better, we added sound effects and lighting effects! But if that isn't enough we also added a motion sensor so that it would activate when someone walks by.

Overall this project isn't overly difficult to do, but does take awhile and requires a healthy amount of random Technic LEGO parts to built the gear box area.



TOOLS:


- [Scissors](#) (1)



PARTS:



- [Crazy Circuits Robotics Board](#) (1)
- [Crazy Circuits LED Chip](#) (1)
- [Continuous Rotation Servo](#) (1)
- [YX5300 MP3 Player Module](#) (1)
- [Ultrasonic Distance Sensor](#) (1)
- [Female to Female Jumper Cables](#) (1)
- [LEGO X-Wing Set](#) (1)
- [LEGO Technic Worm Gear Box](#) (1)
- [LEGO Technic Large Gear](#) (1)
- [Bevel Gear](#) (1)

Step 1 — Build Your X-Wing

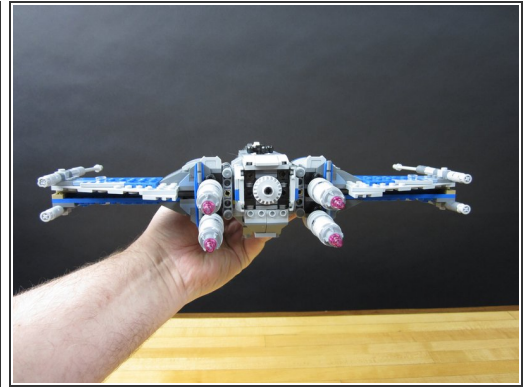




- Build your LEGO X-Wing as normal.
- Remove the launchers from the wings as they look weird.
- ❗ Use either Poe's X-Wing Fighter set (75102) or the Resistance X-Wing Fighter (75149). They're the same model just different colors.

Step 2 — Remove the Wings

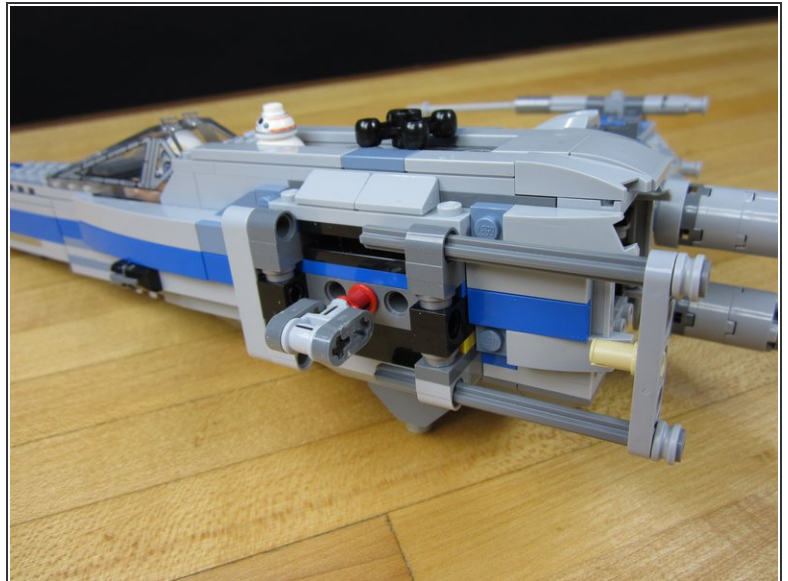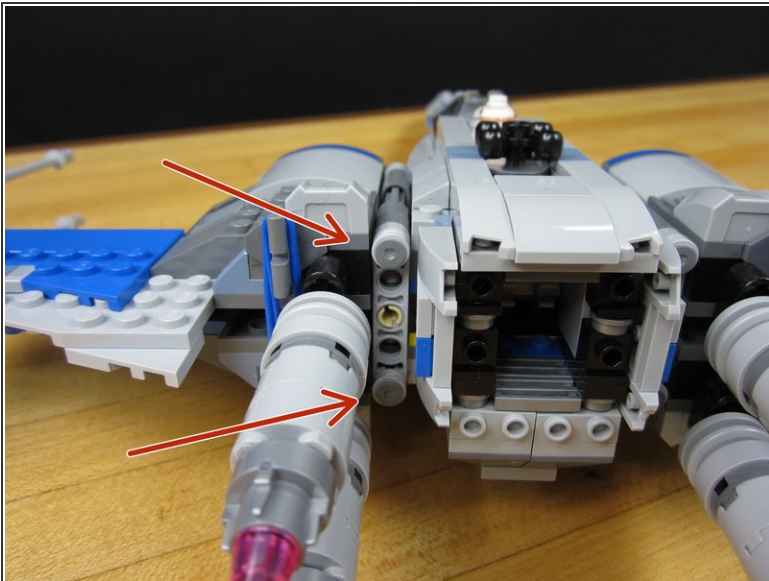




- Take off the rubber bands.
- Pull the two pins that hold the wings onto the body.
- Put the wings to the side.

Step 3 — Remove the Bottom Pieces

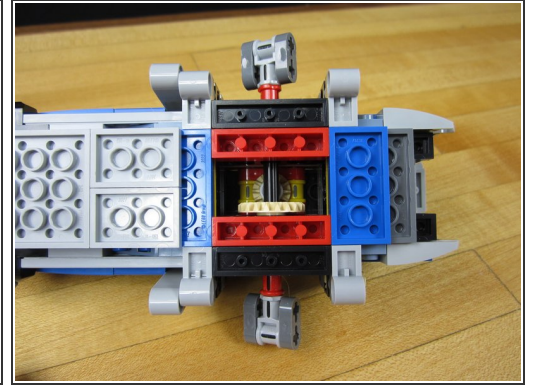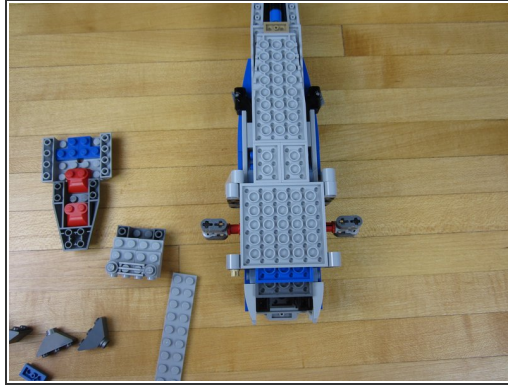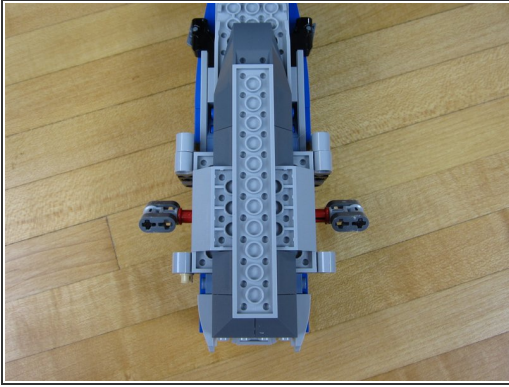

- Start removing pieces from the bottom of the X-Wing.
- Keep going until you get to the internal gear box.
- Pull off the small back "storage area".
- Set all those pieces aside for later.



Step 4 — Add the Bevel Gear

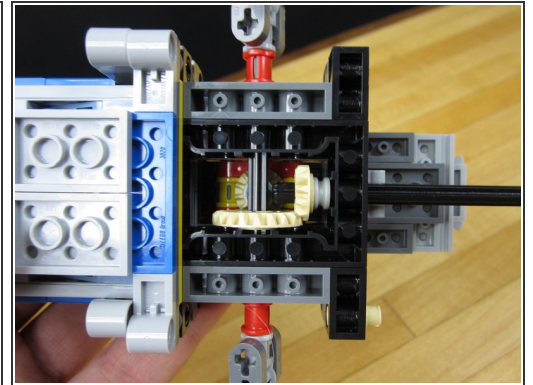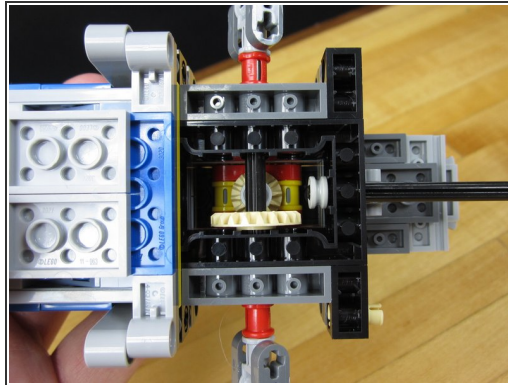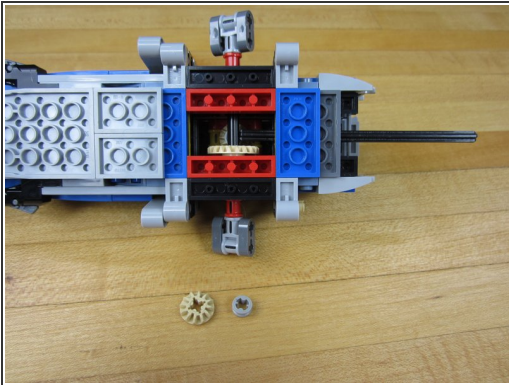

- Insert a size 12 Axel through the back rear of the model.
- Carefully, and with some luck, get a 1/2 Brush onto the end of the axel.
- Lastly get the Bevel gear on.
- Push the rod all the way in so that it connects with the other rod.




⚠ This is the most difficult part of the ENTIRE process. Remove more X-Wing parts if you need to.

Step 5 — Rebuild the Bottom

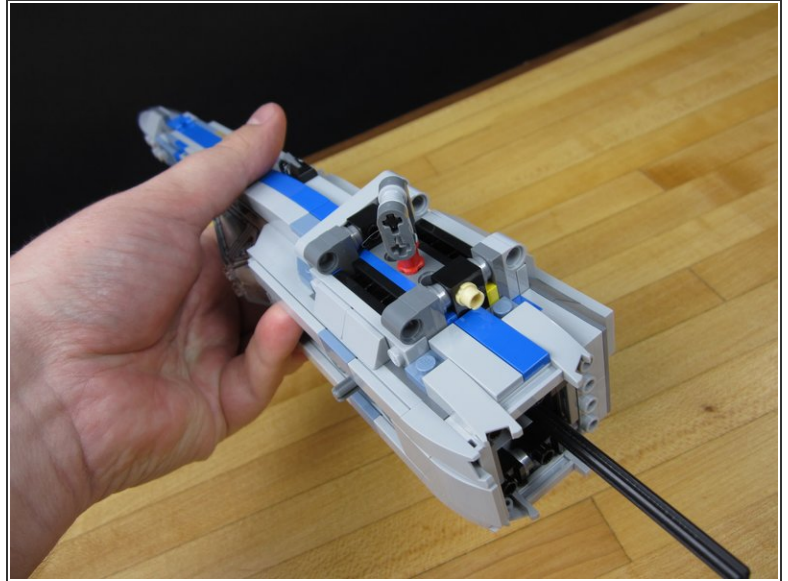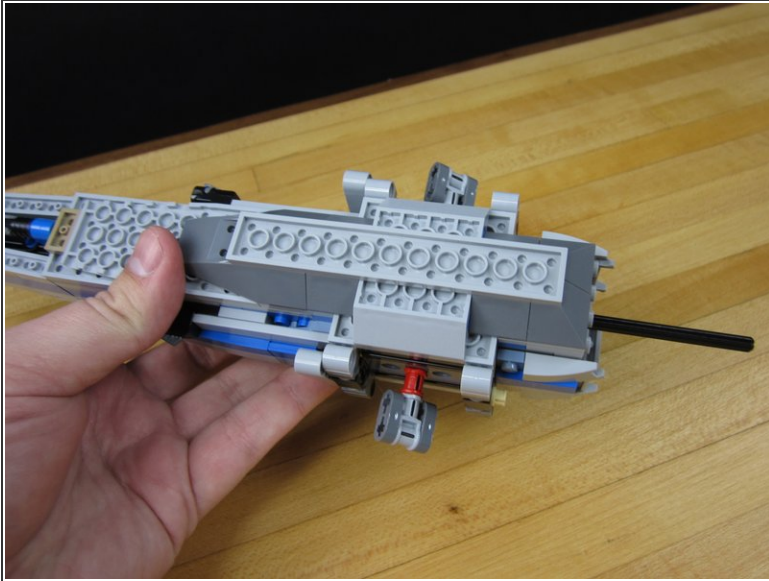

- Rebuild the entire bottom of your X-Wing. Refer to the box and original directions.

Step 6 — Add Bushings to the Axel

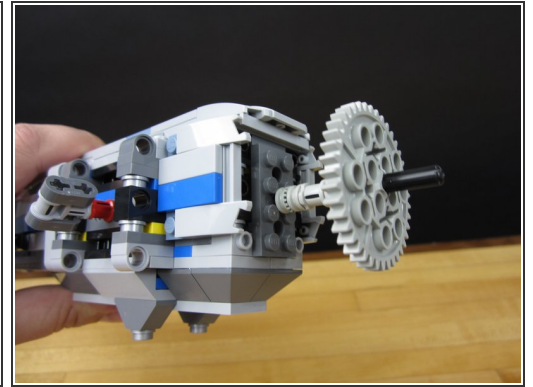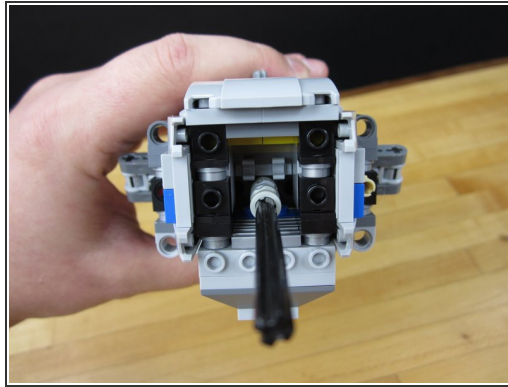
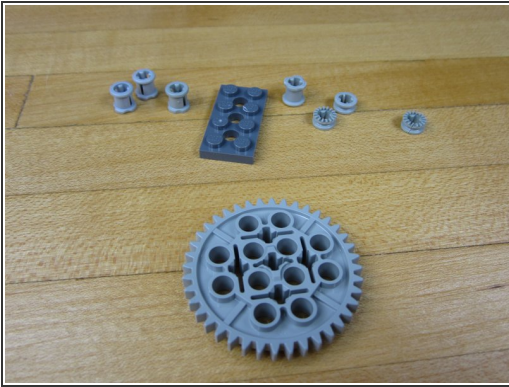


- You'll need 4 x Bushings, 3 x 1/2 Bushings, 1 x 2x4 Plate with holes, 1 x Large Gear.
- Start by pushing one 1/2 Bush down to the end followed by two of the full bushing.
- Add plate, which should stick on the back the X-Wing.
- Then start with a 1/2 Bush, followed by two of the full sized Bushings, then the Gear, and lastly a 1/2 bushing.

⚠ Use an orange LEGO prying tool to push the parts into the X-Wing. If you pull the axel out you'll have to take apart the bottom all over again.




i Our pictures are not 100% accurate to our description above. We described the order in which our final build used, which required us changing a couple things after we had originally taken photographs.

Step 7 — Attach the Wings

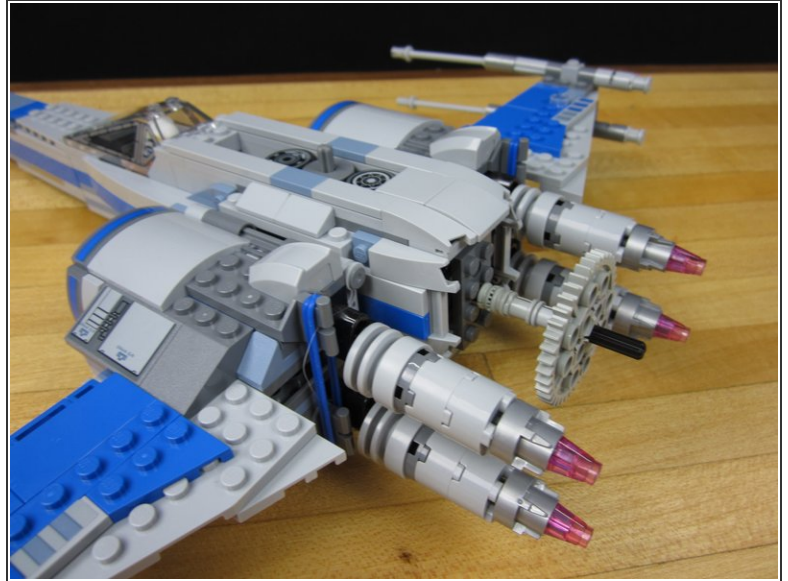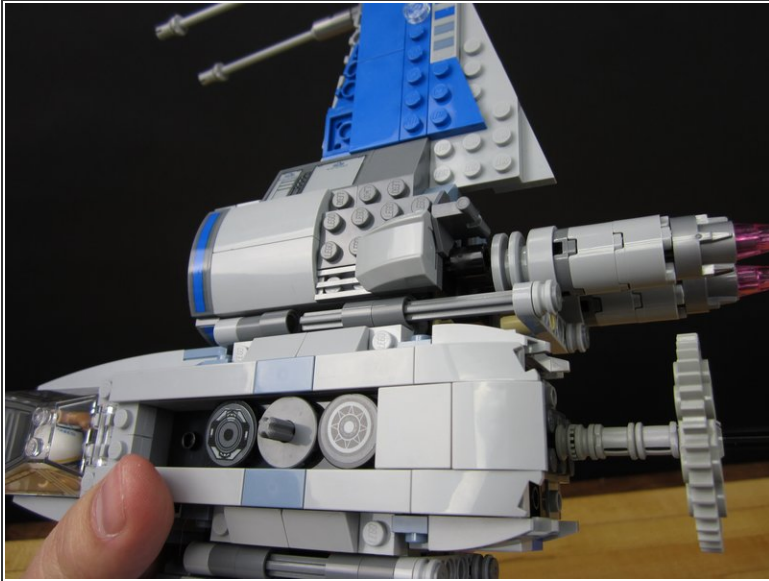




- Put the Wings back on the same way you took them off.
- Attach the rubber bands.

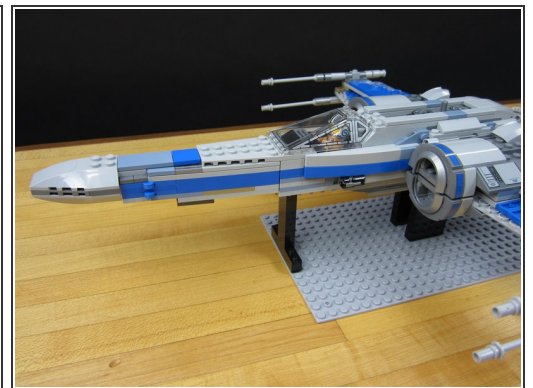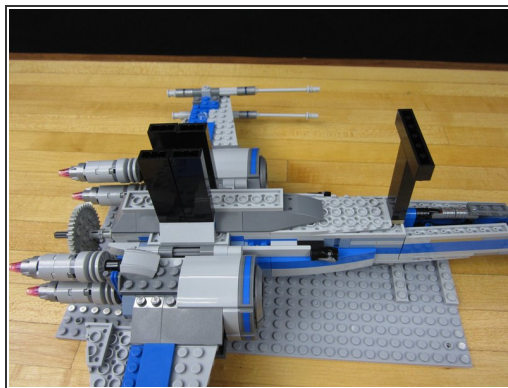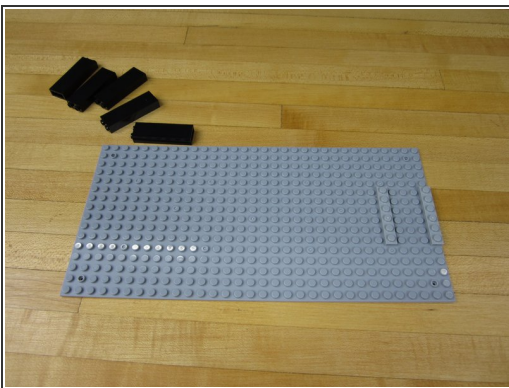

Step 8 — Built the Base and Supports






- Use a large LEGO plate of some kind as your base. You'll need one with room for the gears on the back.
- We used some tall 1x2x5 bricks (2454) to make supports. You can use whatever you want provided that it gives enough clearance for the wings and Servo.

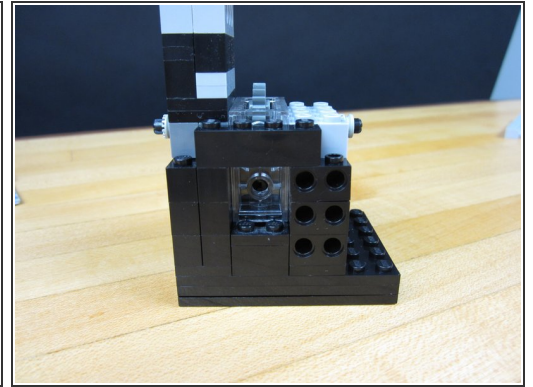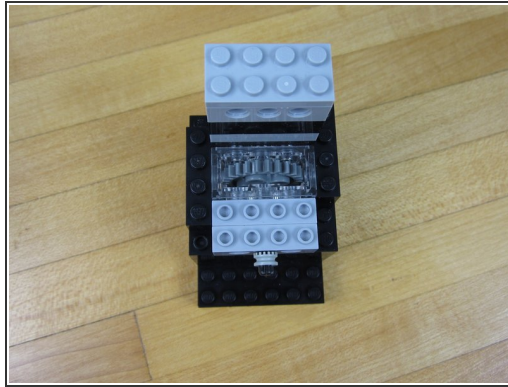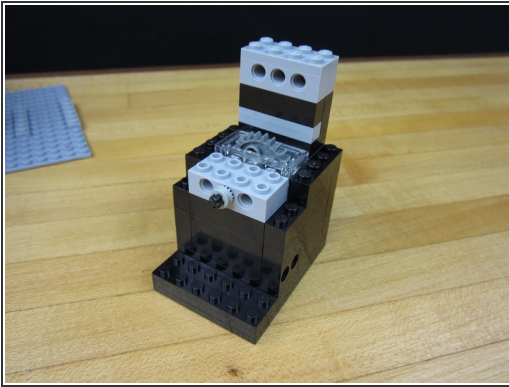Step 9 — Build the Gear Box



-  We used a Gearbox for Worm Gear (6588) to translate motion from the Servo to the large gear. You'll need to build your own setup based on whatever LEGOs you have available.
-  You'll most likely have to fiddle around with everything to get your spacing correct. Use our pictures as a guide.


Step 10 — Connect the Gearbox to the X-Wing

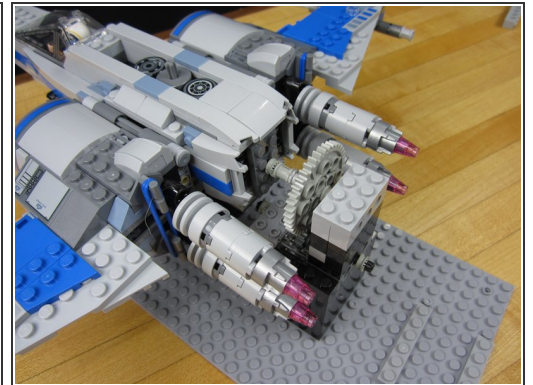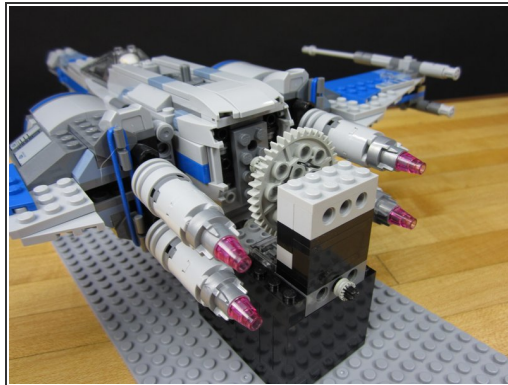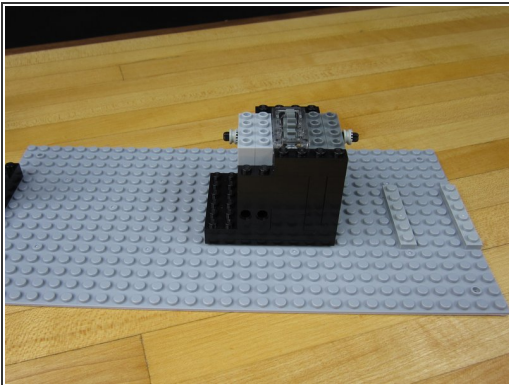

- We added some 1x4 Technic bricks for the end of our size 12 Axel from the X-Wing to go into. Attach those to the Axel.
- Place the X-Wing onto the base plate so that everything lines up.



 This can be annoying. If everything doesn't line up, try again. Take it slow and easy.

Step 11 — Build the Servo Attachment

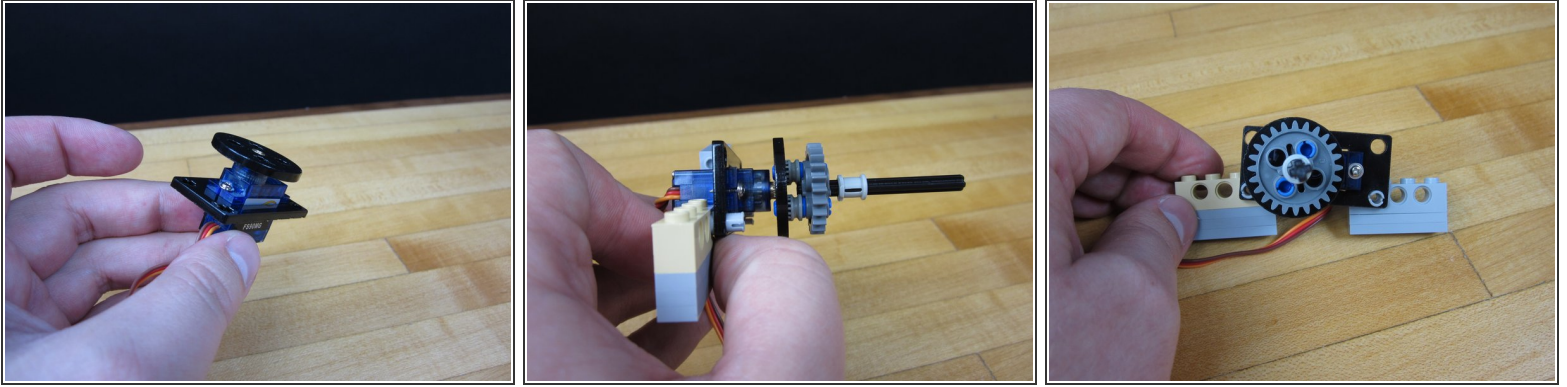


- i** We're using a 9G Continuous Rotation Servo with some laser cut acrylic adaptors. We include those in our kits, but we also have those files available for download.
- Screw the Servo into a Servo Mount.
 - Press on the Horn.
 - Using a small gear, two 1/2 Bushings and some size two rods to create the horn adaptor.
 - Press a size 6 or 8 Axel and a full sized Bushing into the middle of the gear.
 - We used a couple of 1x4 Technic bricks and some 1x4 plates to space everything. You might need to use a different amount of plates.

Step 12 — Connect the Servo and Gearbox

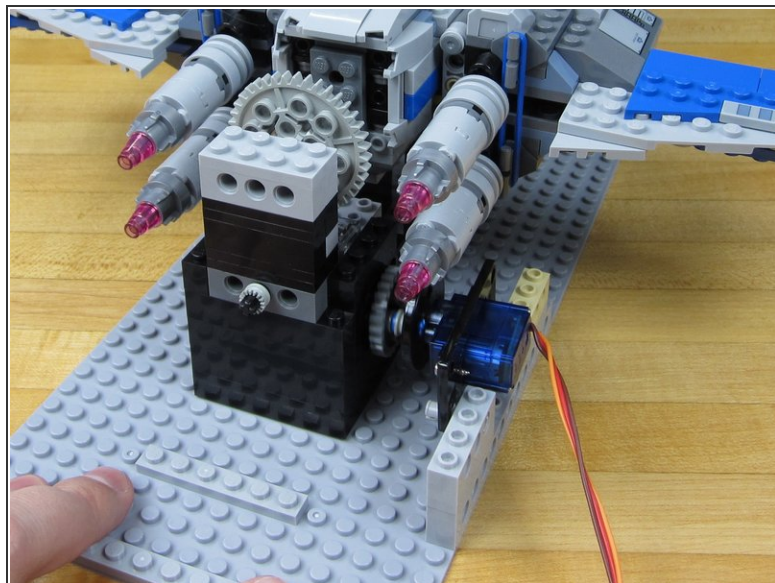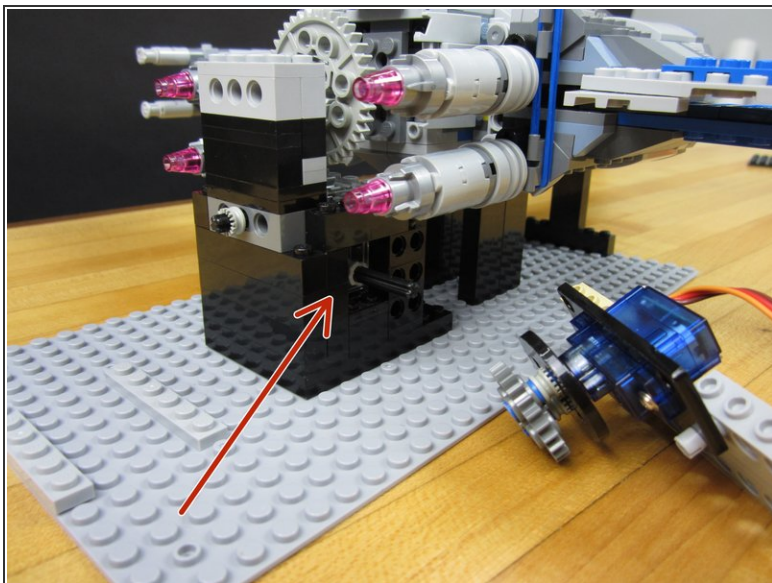




- Pull the axel off the servo and push it into the worm gear in the gearbox.
- Press the Bushing up next to the worm gear.
- Connect everything to the Servo.
- Adjust your pieces to get the spacing correct.

Step 13 — Build the Robotics Board Platform

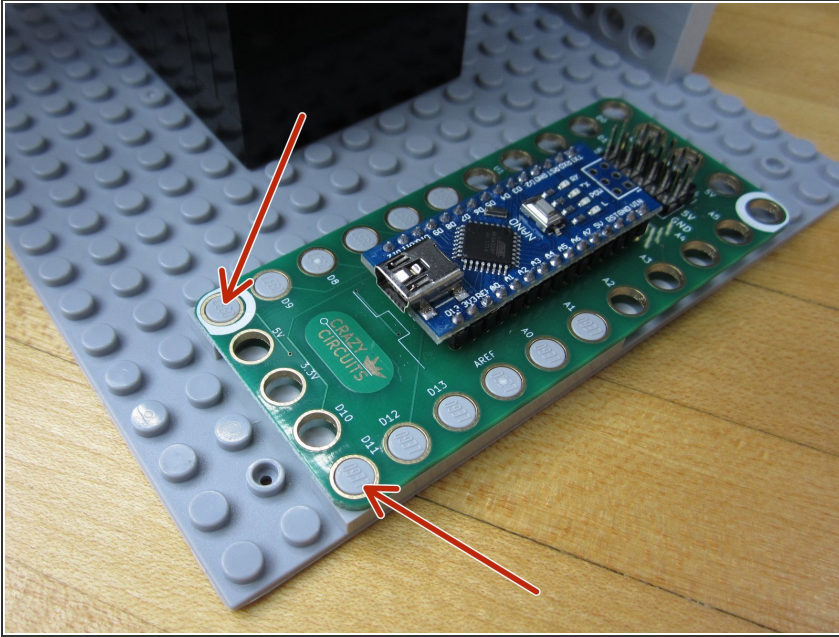


- Use two 1x6 or 1x8 plates to create a small platform for the Robotics Board to sit on.
- ❗ We need to do this since the board won't sit flush on the base plate. Feel free to do some fun designs of your own, just make sure Ground and Pin 11 are filled with a LEGO Stud.

Step 14 — Add LEDs

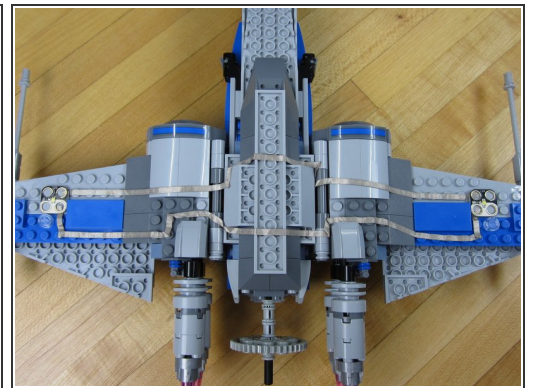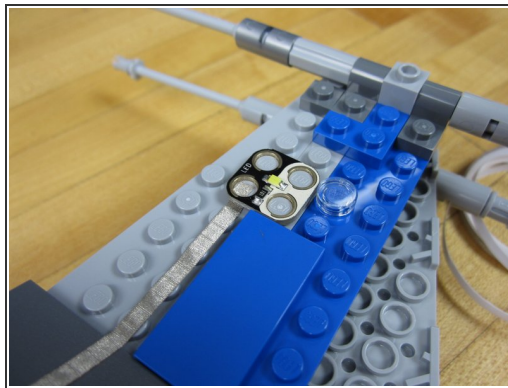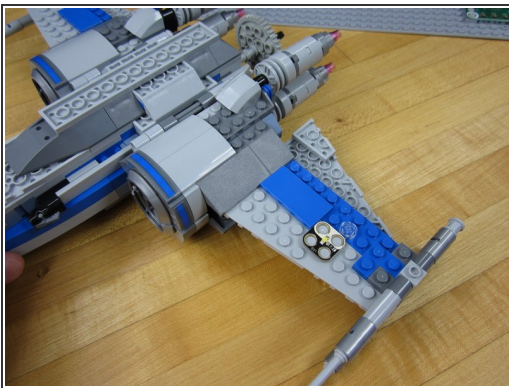


- ❗ Use two Crazy Circuits SMT LED boards to add lights to the bottom of your X-Wing. Make sure you're using Nylon Conductive Tape as regular tape will break as the wings move.
- Place your boards on the bottom of each wing.
- Run Conductive Tape from the Positive on one board to the other board.
- Run Conductive Tape from the Negative on one board to the other board.
- ❗ Don't cover up the spots where the supports that go from the X-Wing to your Base go.

Step 15 — Connect LEDs to the Robotics Board

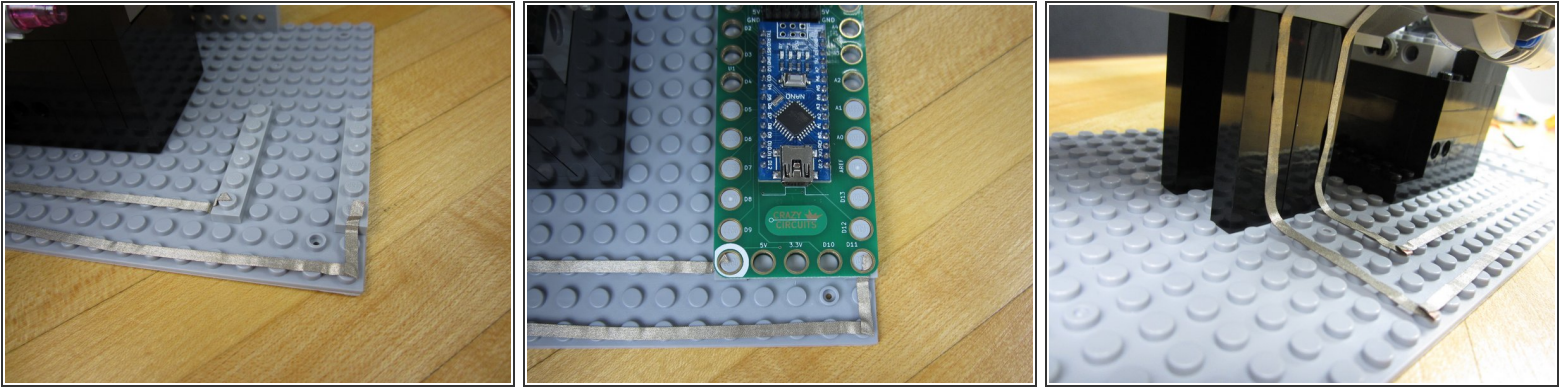



- Connect your X-Wing back to the base.
 - Run Tape from Ground on the Robotics Board to the Ground on the LED Tape.
 - Run Tape from Pin 11 to the Positive LED Tape.
- i** Since Conductive Tape is not reliably conductive on the bottom you'll want to fold over the end that connects to the LED Tape. Then tape that down with another piece of Tape.
- i** We found it helpful to attach the lines of Tape BEFORE we reattached the X-Wing. We just cut really long lines of tape and left them hanging while we set the X-Wing on the base. After that we connected everything.

Step 16 — Connect the Servo and Gearbox

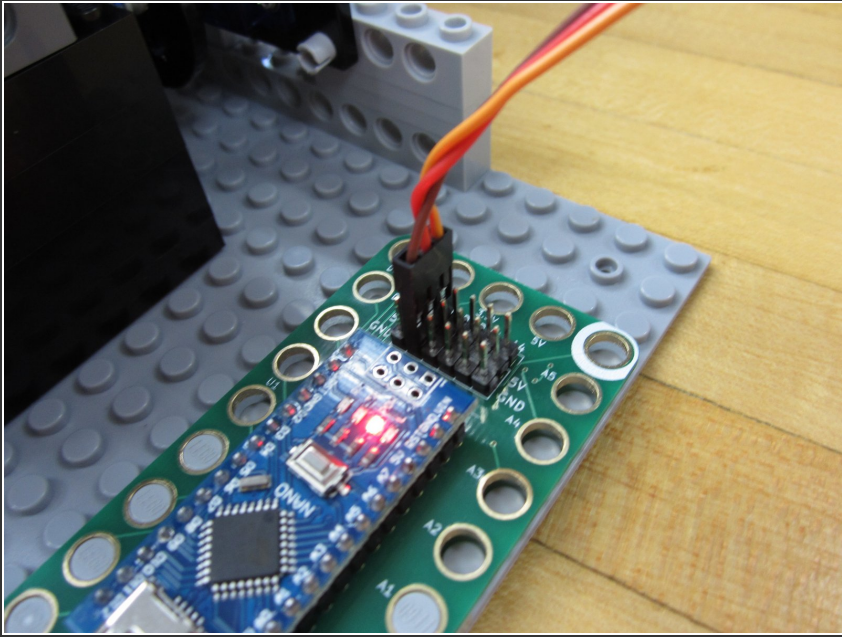

- Plug the Servo into the D3 Pin set.


Step 17 — Connect the Range Finder

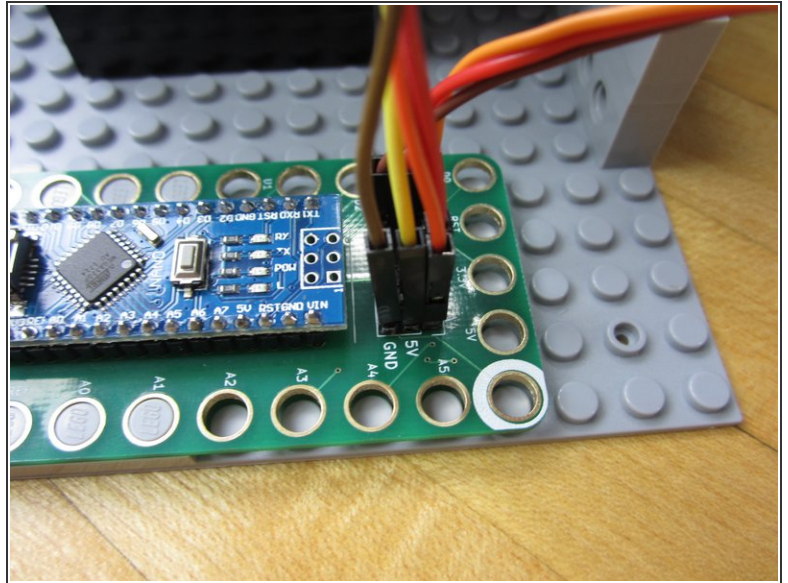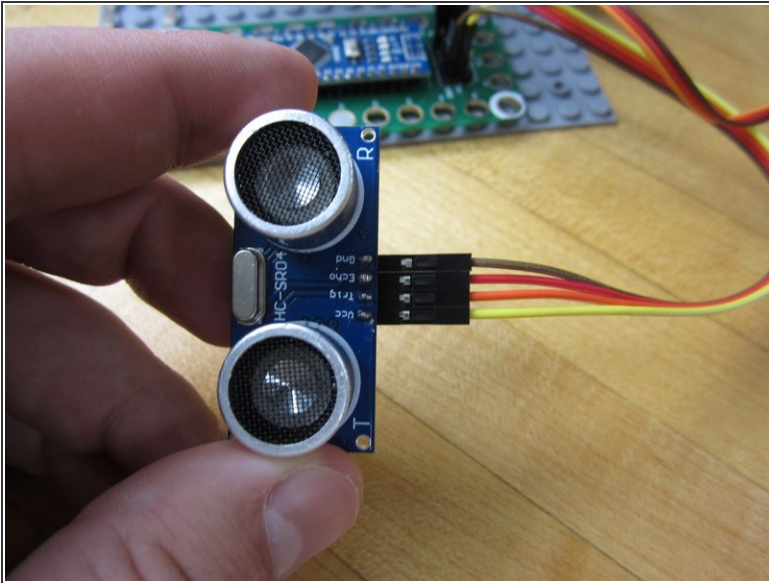

i The Diagram at the start of the guide is a good reference to show you how to wire up the Range Finder.


- Connect VCC to a 5V Pin.
- Connect Trig to A4.
- Connect Echo to A5.
- Connect GND to a GND Pin.

Step 18 — Connect the MP3 Player

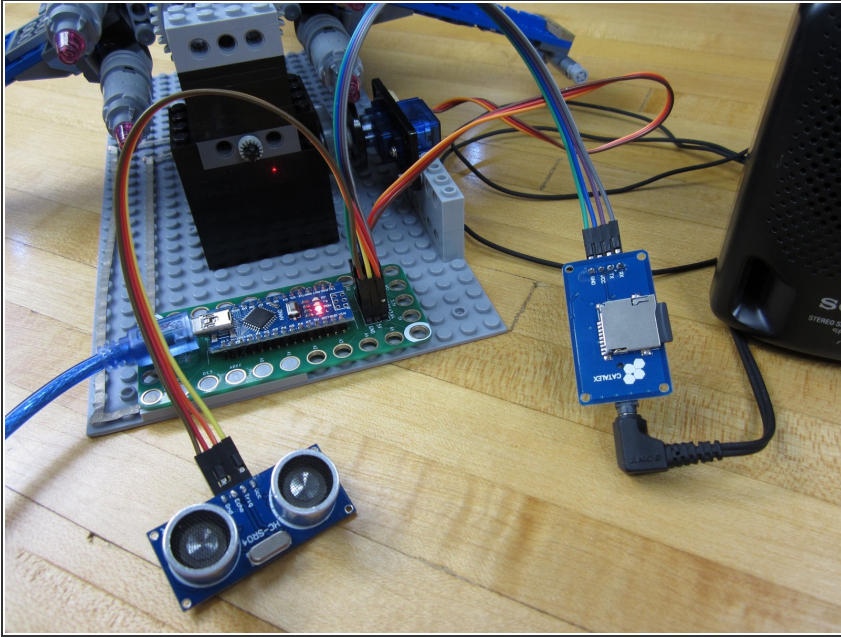

- ① Use the diagram again to help you out.
 - Connect GND to a GND Pin.
 - Connect VCC to a 5V Pin.
 - Connect TX to 5.
 - Connect RX to 6.
- ① Online documentation for this board is weird. Trust us, this is the correct wiring.

Step 19 — Find a Sound Clip

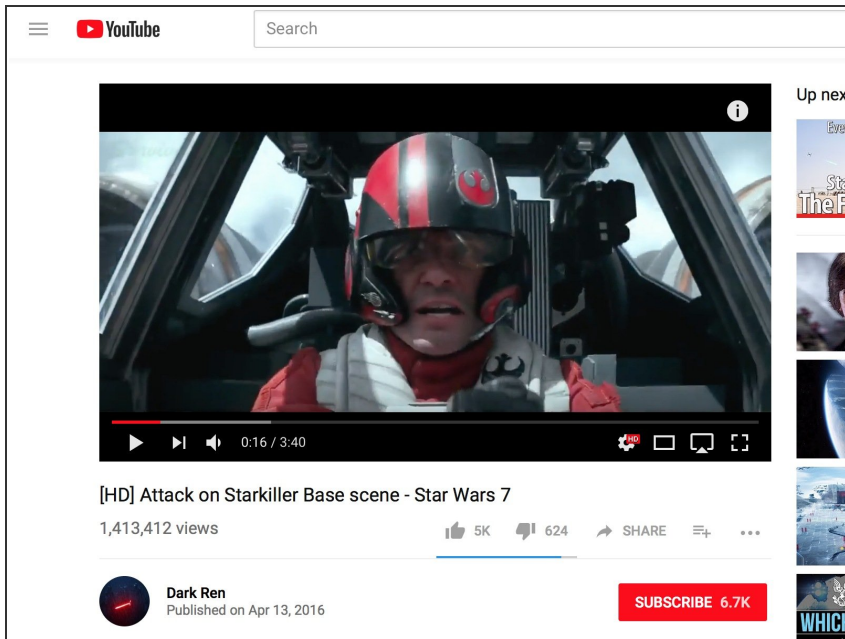

- We grabbed our sound clip via a YouTube Video. You can use any sound file as long as it's a .WAV or .MP3. (We can't give you a sound clip for Copyright reasons.)
 - You'll want to use just one sound clip for our code. Once you find one put it on a micro SD card formatted in FAT.
 - Put the Micro SD Card into the MP3 Player.
- ⓘ Make sure you take note as to how long your clip is, as it will be quite helpful when modifying the code.
- ⓘ X-Wing sounds are great as well as some classic Star Wars music.

Step 20 — Modify Your Code

```

XWingCode
19 NewPing sonar(TRIGGER_PIN, ECHO_PIN, MAX_DISTANCE); // NewPing setup of pins and maximum distance.
20
21 int theDistance = 0;
22 int theDistanceTemp = 0;
23 int theDistanceTotal = 0;
24 int triggerDistance = 30; // set the distance in centimeters to trigger the action
25 int sampleVal = 5;
26
27 Servo myServo;
28
29 int servoPIN = 3;
30 int servoTurnTimeForward = 20000; // time servo will run this many milliseconds
31 int servoTurnTimeReverse = 20000; // time servo will run this many milliseconds
32 int servoForward = 1200;
33 int servoStop = 1500;
34 int servoReverse = 1800;
35
36 int LEDpin = 11;
37
38 static int8_t Send_buf[8] = {0};
39
40 #define CMD_PLAY_N_INDEX 0x03
41 #define CMD_SET_VOLUME 0x06
42 #define CMD_SEL_DEV 0x09
43 #define DEV_TF 0x02
44 #define CMD_PLAY 0x00
45 #define CMD_PAUSE 0x0E
46 #define CMD_SINGLE_CYCLE 0x19
47 #define SINGLE_CYCLE_ON 0x00
48 #define SINGLE_CYCLE_OFF 0x01
49 #define CMD_PLAY_N_VOL 0x22
50
51 void setup() {
52   Serial.begin(9600);
53   Serial.println("Starting...");
54   mySerial.begin(9600);
55   pinMode(LEDpin, OUTPUT);
56   analogWrite(LEDpin, 10);
57   myServo.attach(servoPIN);
58
59   // LED
60   Serial.println("LED on");
61   digitalWrite(LEDpin, HIGH);
62   delay(2000);
63   digitalWrite(LEDpin, LOW);
64   delay(2000);
65   // reset
66   theDistance = 0;
67   theDistanceTotal = 0;
68 }
69
70 // else {
71 //   Serial.println("Waiting...");
72 // }
73
74 // void loop() {
75 //   // sendCommand(int8_t command, int16_t dat) {
76 //     delay(200);
77 //     Send_buf[0] = 0x7e; //starting byte
78 //     Send_buf[1] = 0xff; //version
79 //     Send_buf[2] = 0x06; //the number of bytes of the command without starting byte and ending byte
80 //     Send_buf[3] = command; //
81 //     Send_buf[4] = 0x00; //0x00 = no feedback, 0x01 = feedback
82 //     Send_buf[5] = (int8_t)(dat >> 8); //datah
83 //     mySerial.write(Send_buf, 6);
84 //   }
85 // }
86
87 // audio
88 // Serial.println("play audio");
89 // sendCommand(CMD_PLAY_N_VOL, 0x1E01); // play the first file with volume 15 class
90 // delay(25000); // delay for audio to finish playing
91 // }
92
93 // servo
94 // Serial.println("servo reverse");
95 // myServo.writeMicroseconds(servoReverse); // start turning
96 // delay(servoTurnTimeReverse); // allow servo to turn for X number of milliseconds
97 // Serial.println("servo stop");
98 // myServo.writeMicroseconds(servoStop); // stop turning
99 // }
100
101 // LED
102 // Serial.println("LED on");
103 // digitalWrite(LEDpin, HIGH);
104 // delay(2000);
105 // digitalWrite(LEDpin, LOW);
106 // delay(2000);
107 // reset
108 // theDistance = 0;
109 // theDistanceTotal = 0;
110 // }
111 // else {
112 //   Serial.println("Waiting...");
113 // }
114
115 // void loop() {
116 //   // sendCommand(int8_t command, int16_t dat) {
117 //     delay(200);
118 //     Send_buf[0] = 0x7e; //starting byte
119 //     Send_buf[1] = 0xff; //version
120 //     Send_buf[2] = 0x06; //the number of bytes of the command without starting byte and ending byte
121 //     Send_buf[3] = command; //
122 //     Send_buf[4] = 0x00; //0x00 = no feedback, 0x01 = feedback
123 //     Send_buf[5] = (int8_t)(dat >> 8); //datah
124 //     mySerial.write(Send_buf, 6);
125 //   }
126 // }

```

- If you've never used our Robotics Board before you'll need to read the user guide and install the right software and drivers.
- You'll also need to grab and install the [NewPing library](#) as well.
- Open up your Arduino software and [copy our code](#) into a new project window.
- Lines 30 & 31 control how long the Servo will move when opening and closing the wings. We find that 20000 ms is about right. You can change the time by changing those values.
- Line 91 controls how long the Servo pauses to wait for your audio clip. Our Sound Clip is about 25 seconds so we have it set to 25000 MS.
- The code has the LEDs come on once the wings open, then turn off once they're closed.

Step 21 — Have Fun!



- Attach some Speakers to the MP3 Player and run the code. (Powered Speakers with some Volume Control work best)
- ⓘ The Servo will sound horrible. That's expected.
- ⓘ You'll most likely have to modify your code several times to get the timing correct.
- ⓘ You'll also most likely have to go back and modify your gearbox or servo holding areas. The strain may push things apart on you, so modify where necessary.