




Conductive Paint Sound Effects

Use Bare conductive paint to create fun sound effects.

Written By: Joshua

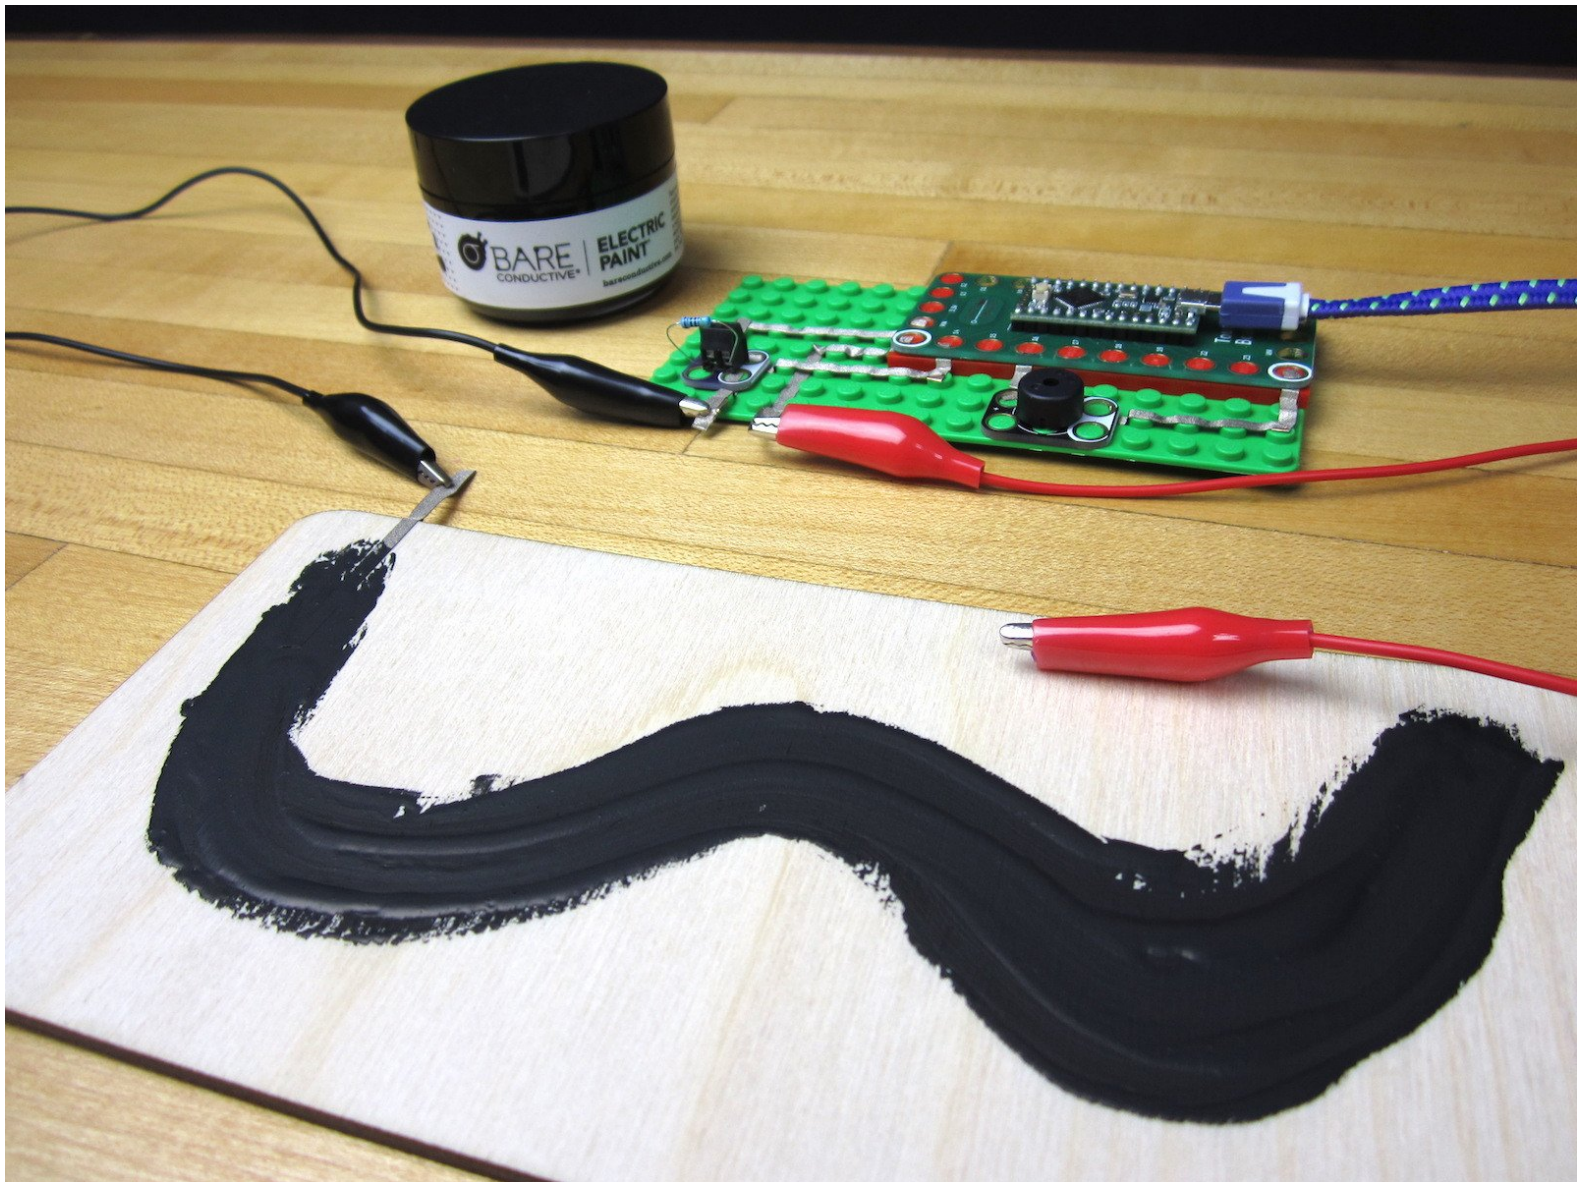

INTRODUCTION

Conductive paint is extremely fun to use in place of a Potentiometer (variable resistor) in projects and you can use it to control all sorts of things. In this activity we'll be using Bare Conductive Paint to control the sound being produced by a Piezo Speaker hooked up to one of our Touch Boards.

If you have a Robotics Board you can also do this project, you'll just have to change a couple of pin numbers in the code.



TOOLS:

- [Scissors](#) (1)
- [Screw Driver](#) (1)



PARTS:


- [Crazy Circuits Touch Board](#) (1)
- [Crazy Circuits Piezo Speaker Chip](#) (1)
- [Crazy Circuits Screw Terminal Chip](#) (1)
- [Bare Conductive Paint](#) (1)

Step 1 — Screw in the Resistor




- Grab a Resistor and screw it into the Screw Terminal Chip.
- ⓘ We're using a 460 ohm resistor, however a resistor of near or similar value will work.
- ⓘ If you don't have a Screw Terminal Chip around you can always just use Conductive Tape to hold the Resistor down. We attached a small diagram of what that would look like at the end of this write up.

Step 2 — Make a Platform for the Touch Board

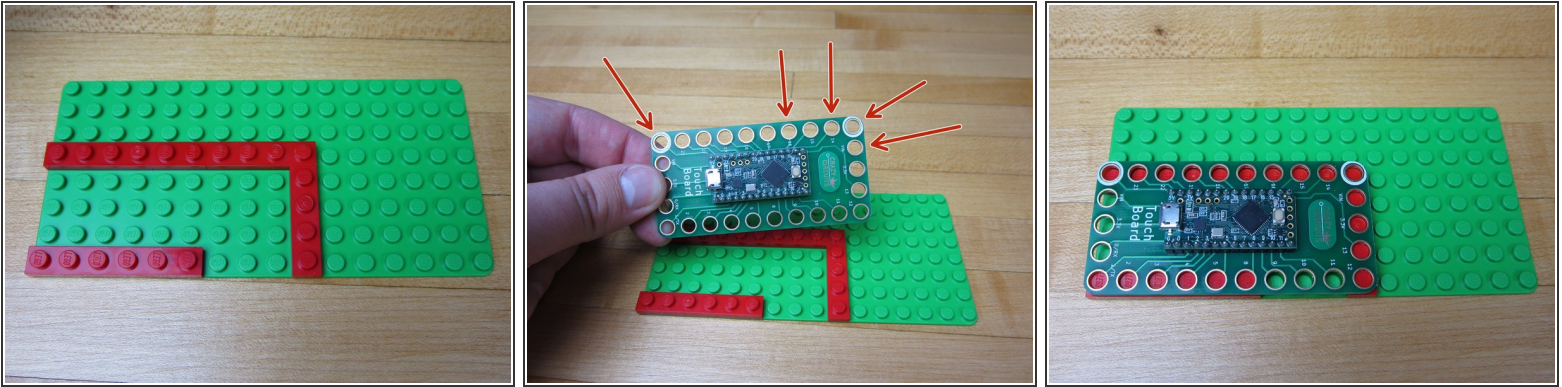



- The Touch Board won't lay flat onto our 8x16 base plate, so we'll need to make a platform for it. We're using several thin plates to create the platform.
- ⓘ You NEED to have bricks below the pins that you're using, otherwise the tape won't make a connection. We're using both Grounds, Pins 14 and 16, and the VIN on the right side.

Step 3 — Add the Piezo Speaker

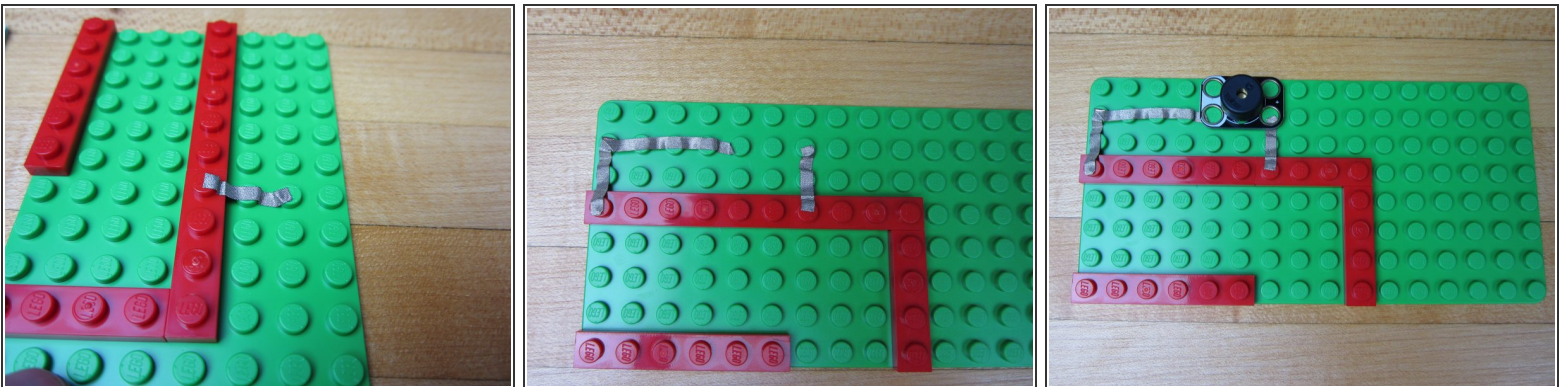



- Run Conductive Tape from Pin 16 to where you want your Piezo Speaker. Cut excess tape and press down with your fingernail or the Piezo Speaker.
- Run Conductive Tape from the left side Ground Pin (white circle) to the Piezo Speaker.
- Press your Piezo Speaker into place.

Step 4 — Connect Pin 14 to the Screw Terminal

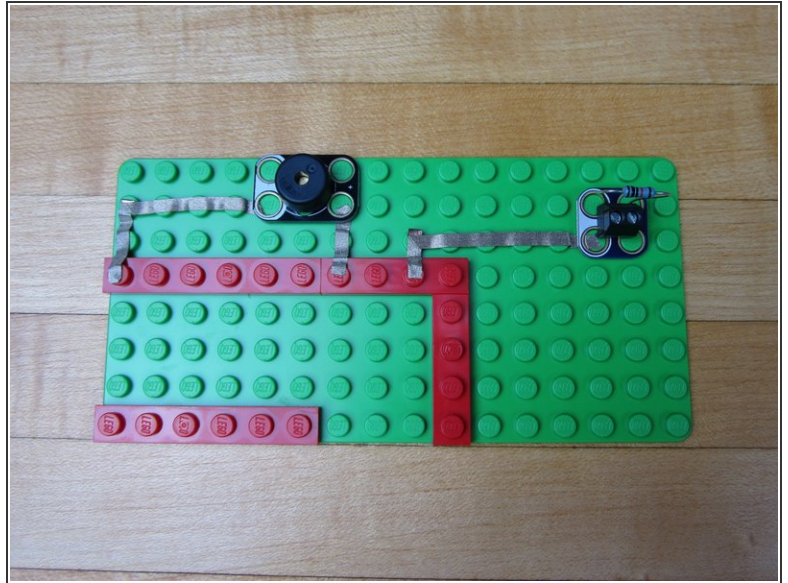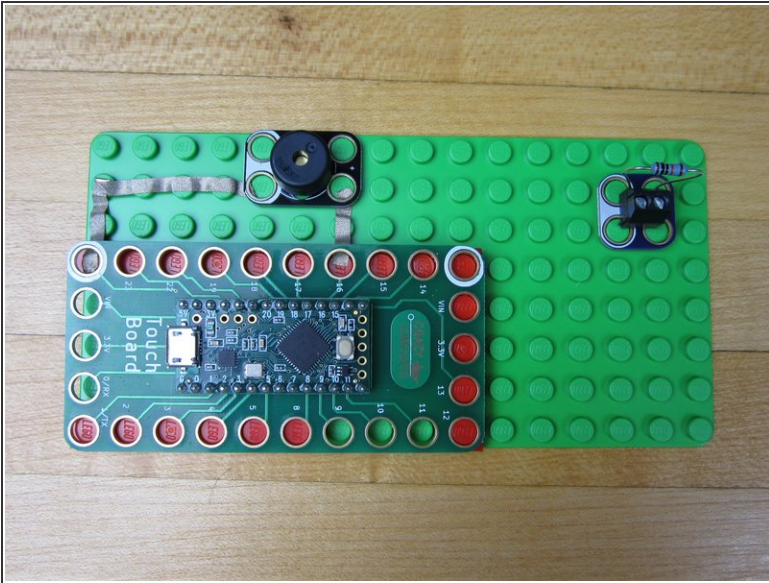


- Place your Screw Terminal near the top right corner for placement.
- Run a line of Conductive Tape from Pin 14 to the white side of the Screw terminal.
- Cut excess tape and press to fit.

Step 5 — Connect VIN to the Screw Terminal

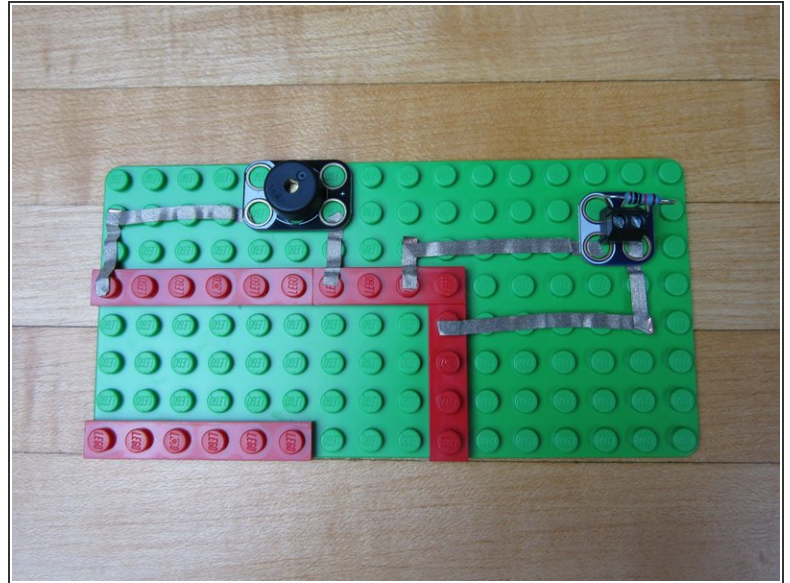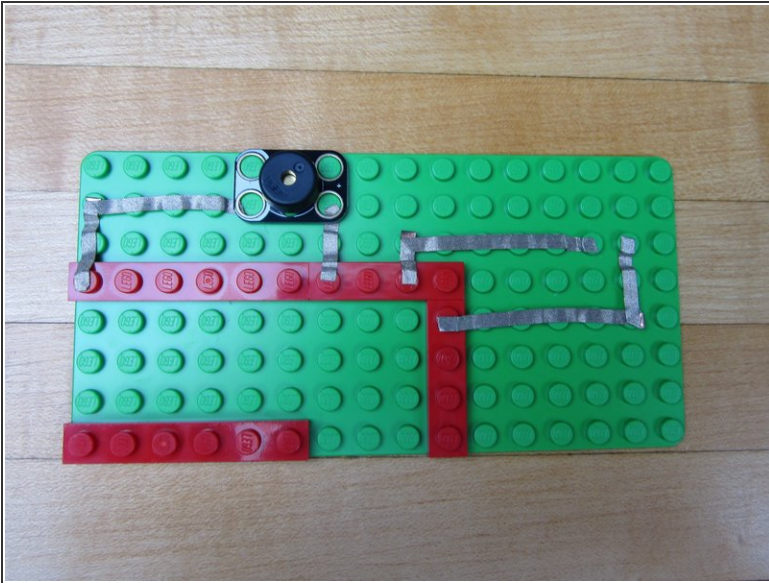



- Run a line of Conductive Tape from the VIN pin to the blue side of the Screw Terminal.
- Cut excess tape and press to fit.

Step 6 — Add an Alligator Connection Strip

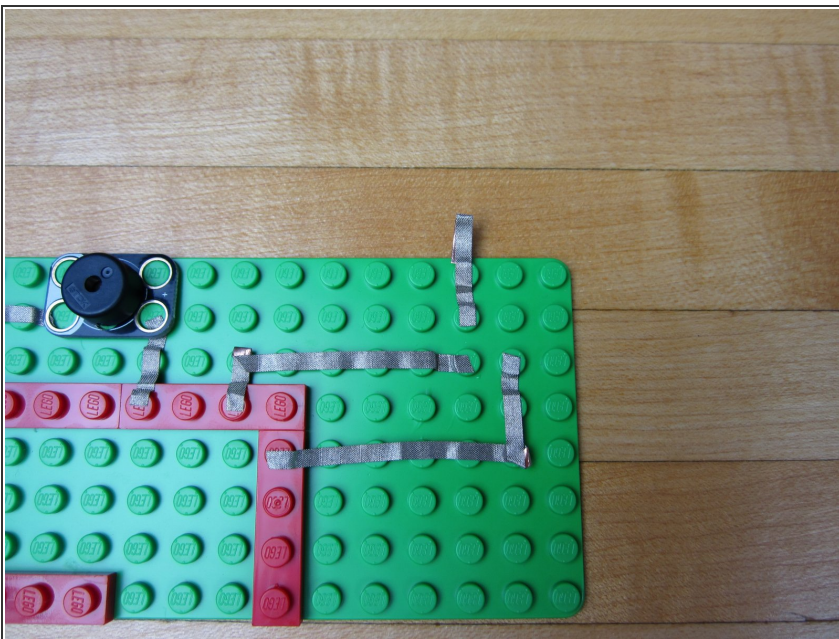


- Use a piece of Conductive Tape and go from the second hole on the Screw Terminal off the side of your building surface.
- Fold over the tape onto itself so it's conductive on both sides. You can also just run it to the bottom side of the base plate as well.

Step 7 — Connect Ground to Alligator Clip

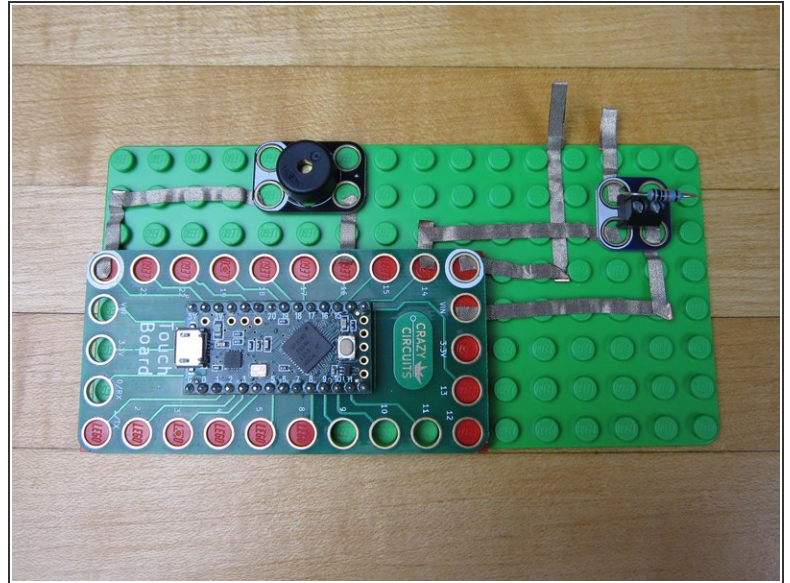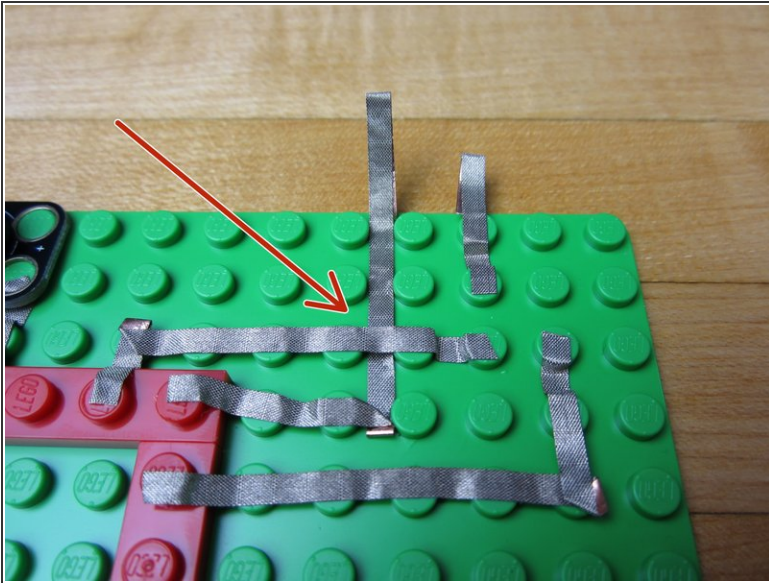

- Use a longer line of tape and go from the Ground pin off the side of the board.
- Start by threading a long piece of tape UNDER the pin 14 line of tape.
- Connect one end to the Ground pin. Let the other end hang off the edge, and fold it over like you did before.
- Use a pencil, screw driver, or paper clip to push down the tape so that the Ground line isn't touching the Pin 14 line.

Step 8 — Upload Code

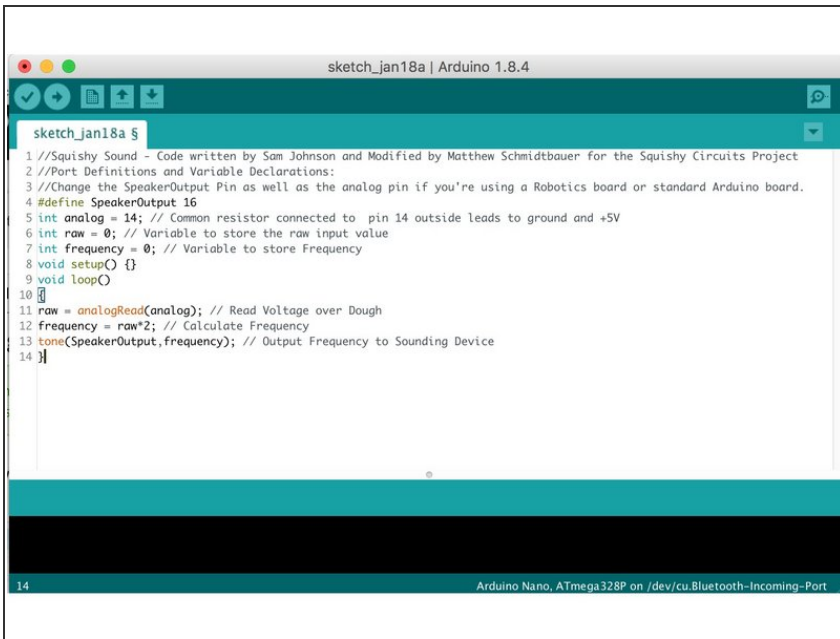


```
sketch_jan18a | Arduino 1.8.4

sketch_jan18a $
1 //Squishy Sound - Code written by Sam Johnson and Modified by Matthew Schmidbauer for the Squishy Circuits Project
2 //Port Definitions and Variable Declarations:
3 //Change the SpeakerOutput Pin as well as the analog pin if you're using a Robotics board or standard Arduino board.
4 #define SpeakerOutput 16
5 int analog = 14; // Common resistor connected to pin 14 outside leads to ground and +5V
6 int raw = 0; // Variable to store the raw input value
7 int frequency = 0; // Variable to store Frequency
8 void setup() {}
9 void loop()
10 {
11   raw = analogRead(analog); // Read Voltage over Dough
12   frequency = raw*2; // Calculate Frequency
13   tone(SpeakerOutput,frequency); // Output Frequency to Sounding Device
14 }
```

- i** If you've never used your Touch Board before, review the [Touch Board User Guide](#).
- Plug your Touch Board into your computer and open up the Arduino Software.
- Follow [this link](#) and choose either the ConstantTone or StepTone code. Copy and paste the code into a new project window in the Arduino Software.
- Upload the Code.

Step 9 — Robotics Board Changes

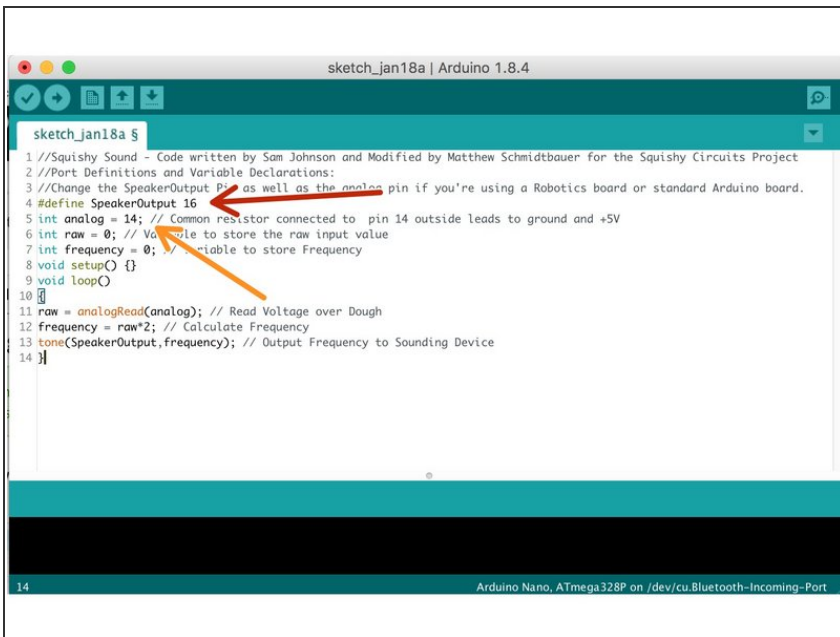


```
sketch_jan18a | Arduino 1.8.4

sketch_jan18a $
1 //Squishy Sound - Code written by Sam Johnson and Modified by Matthew Schmidbauer for the Squishy Circuits Project
2 //Port Definitions and Variable Declarations:
3 //Change the SpeakerOutput Pin as well as the analog pin if you're using a Robotics board or standard Arduino board.
4 #define SpeakerOutput 16
5 int analog = 14; // Common resistor connected to pin 14 outside leads to ground and +5V
6 int raw = 0; // Variable to store the raw input value
7 int frequency = 0; // Variable to store Frequency
8 void setup() {}
9 void loop()
10 {
11   raw = analogRead(analog); // Read Voltage over Dough
12   frequency = raw*2; // Calculate Frequency
13   tone(SpeakerOutput,frequency); // Output Frequency to Sounding Device
14 }
```



- i** If you're using a Robotics board you'll need to change a couple of lines.
- Change the Speaker Output Pin to 3.
- Change the Input (Analog Input) to A5.
- i** At the end of this write up is a diagram for how we suggest you hook up your Robotics Board, however the pins you use are entirely up to you.

Step 10 — Test Everything... Again

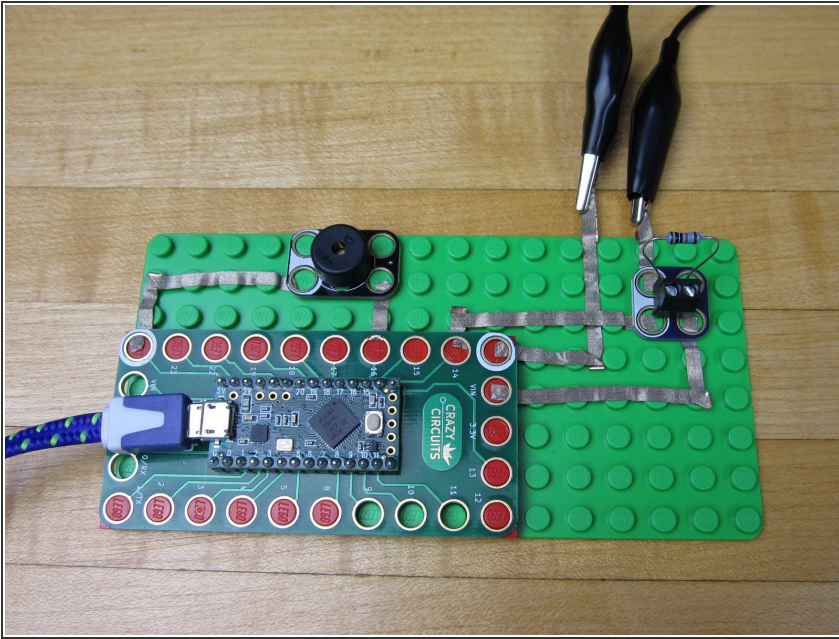



- Leave your Touch Board plugged into your computer.
- Use an Alligator Clip to connect your two Alligator Connection Points together.
- No matter which code you're using, you should hear something come out of your speaker.

Step 11 — Prepare Your Painting Surface

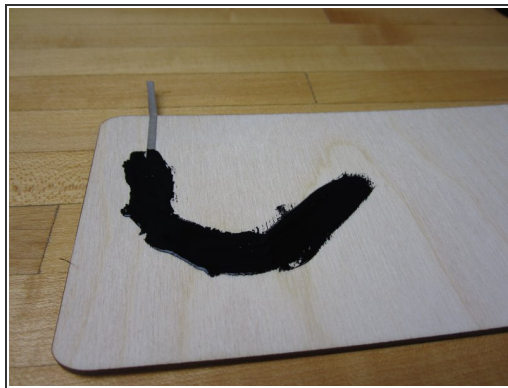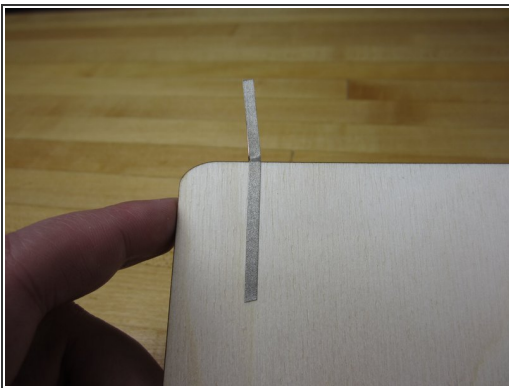


- i** We're using a piece of wood for our paint surface, but a piece of cardboard or paper would work just fine.
- Take a long piece of tape and apply it to your work area. Fold it over and have to connect to the back side of your board.
 - Starting over your tape, apply a long line of paint. Try and paint on evenly.
 - Bare Conductive Paint is water soluble, meaning it more or less melts when it touches water. Use some clear spray paint to seal your project.

Step 12 — Connect Alligator Clip and Play!

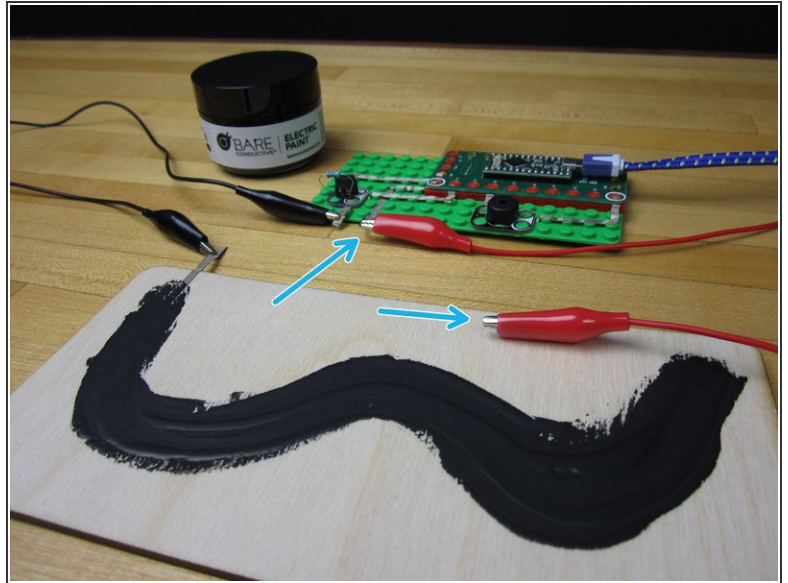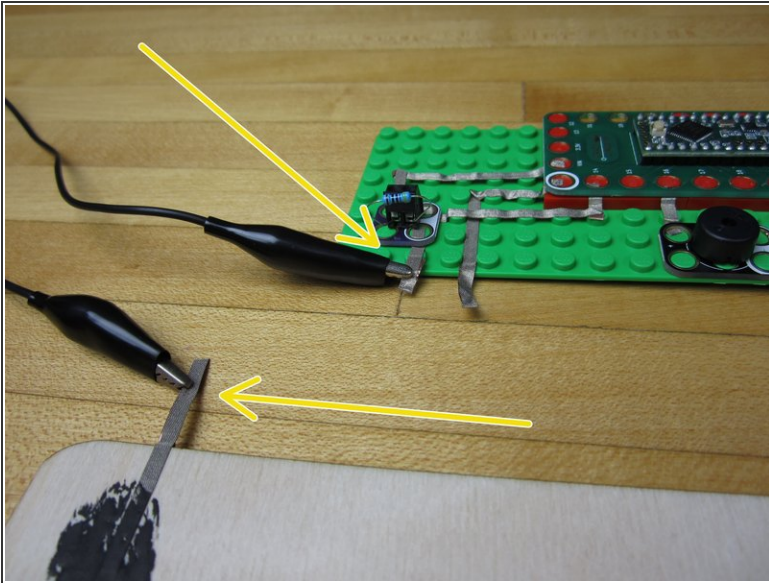

- Use an Alligator Clip to connect your electronics to the tape on your painting surface.
- Use your second Alligator Clip and connect it to the second output from your electronics.
- Use the second Alligator Clip as a probe. Move it around your paint area to change the types of sound your project is making.

Step 13 — Trouble Shooting

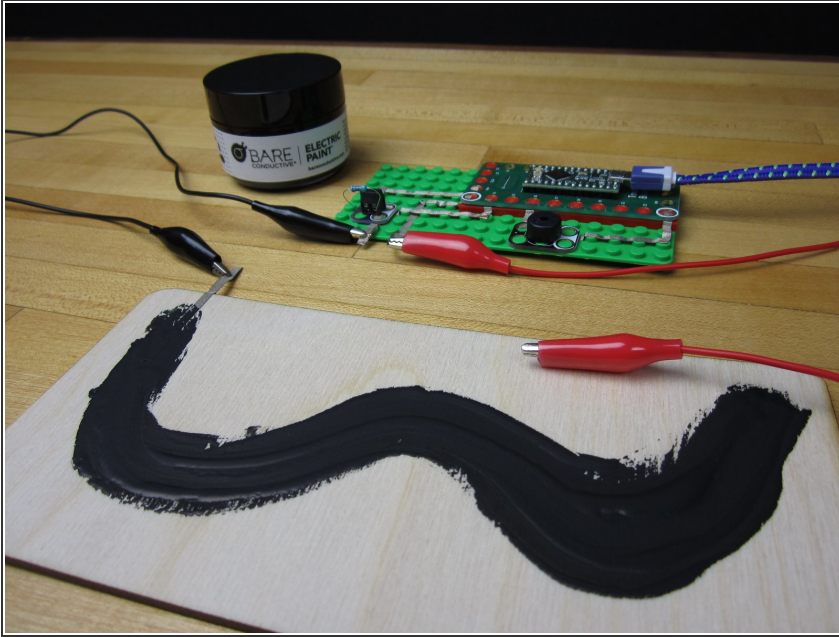

- The #1 problem people have with this project is that they had issues uploading the code.
- A longer line of paint is much more useful than a short line of paint.
- We used a 460 ohm resistor, however you can use larger ones if you want. Test to see what happens when you use a larger resistor.
- When in doubt, use the "sequential tone" code. The "constant" tone is super annoying.
- ① You can use this EXACT same process with ANY Arduino project that uses a variable resistor. Controlling a servo or LED is really simple using this process.