




# Really Robotic Robot Costume - Whimsical Gauge

Make a cardboard robot costume that's really robotic with this DIY series. This tutorial is about creating a robot gauge with a servo motor.

Written By: Natasha Dzurny

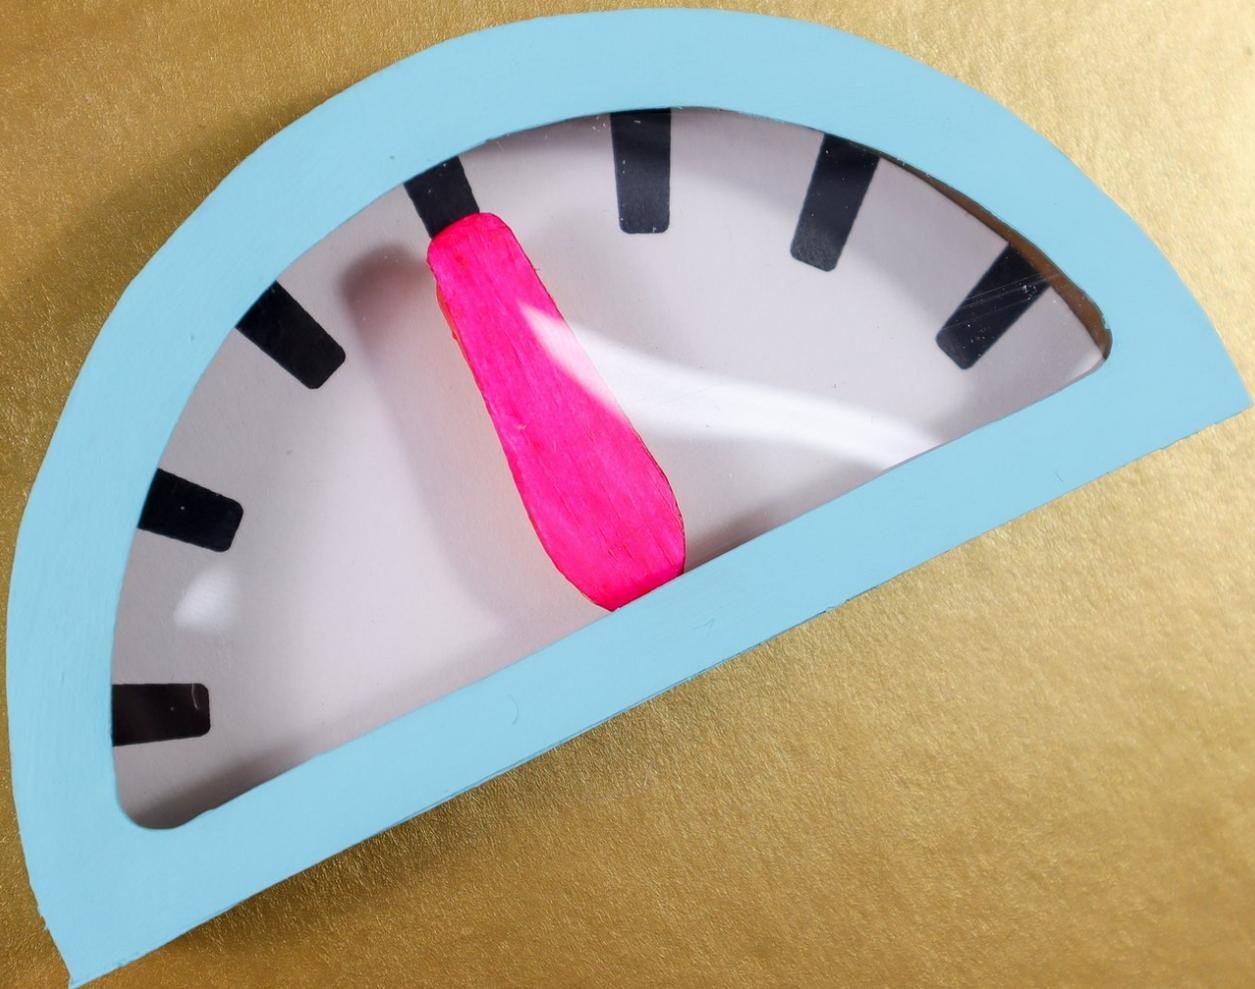

## INTRODUCTION

Meet Sally Servo - the Really Robotic Robot. :)

In this tutorial, you'll learn how to make a moving gauge like the one on Sally's robot suit. This is a great "introduction to micro:bit" project using the built-in microphone as an input and a servo motor as an output.


### TOOLS:

- [Scissors](#) (1)
- [Printer \(to print out the template\)](#) (1)

### PARTS:


- [micro:bit](#) (1)  
*(version 2 for microphone)*
- [Crazy Circuits Bit Board](#) (1)
- [Brick Compatible 270 Degree Servo](#) (1)
- [2 AAA Battery Holder](#) (1)
- [Cardboard](#) (1)
- [Cardstock](#) (1)
- [Acrylic Paint](#) (1)

## Step 1 — Print the Template

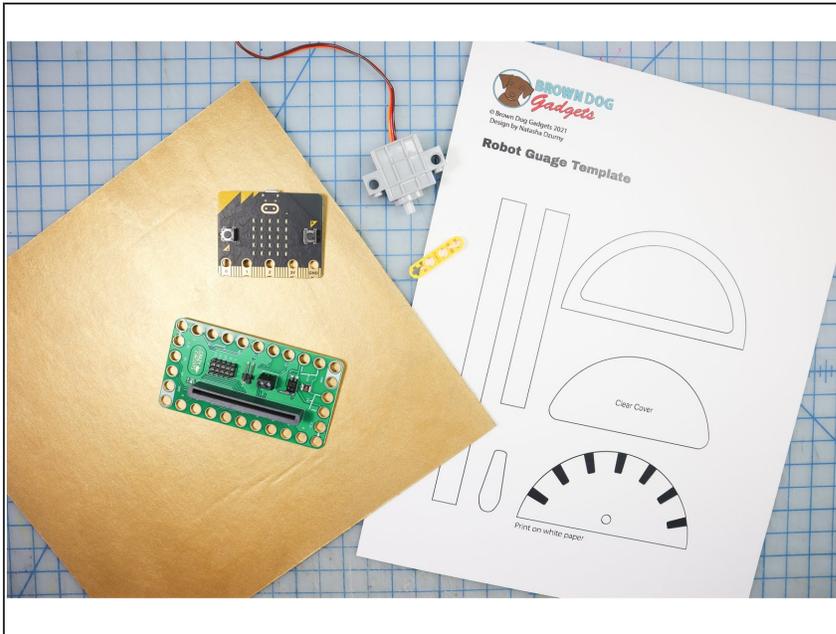


- Print the template on white cardstock or thick paper.

## Step 2 — Cut out the shapes

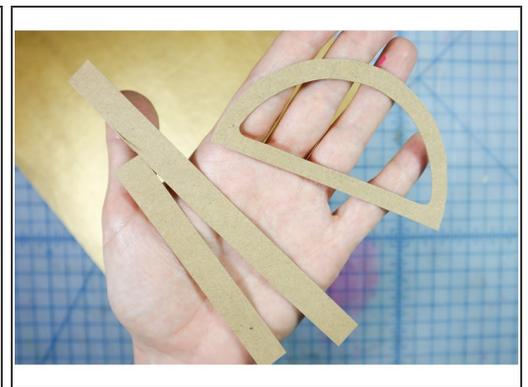



- Cut out the shapes as instructed:
  - The gauge face from the paper template
  - The cover from clear plastic
  - The remaining pieces from thick paper or cardboard with one side of the corrugation removed

### Step 3 — Make a hole in the cardboard

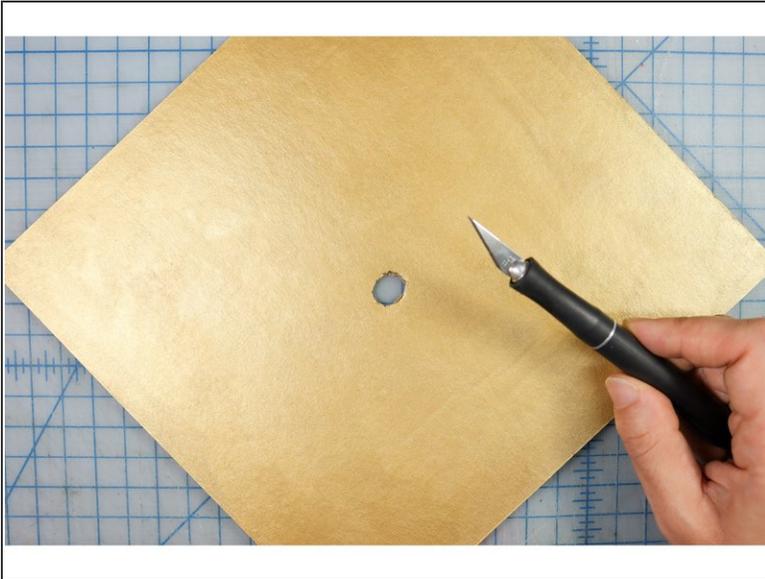

- If you plan to paint the base of the robot costume, do so before proceeding.
- Put a 1/2 inch hole in the cardboard where the center of the gauge will go. Then, add a notch so that the motor sits flush with the top of the cardboard as shown.

### Step 4 — Glue the Motor In Place

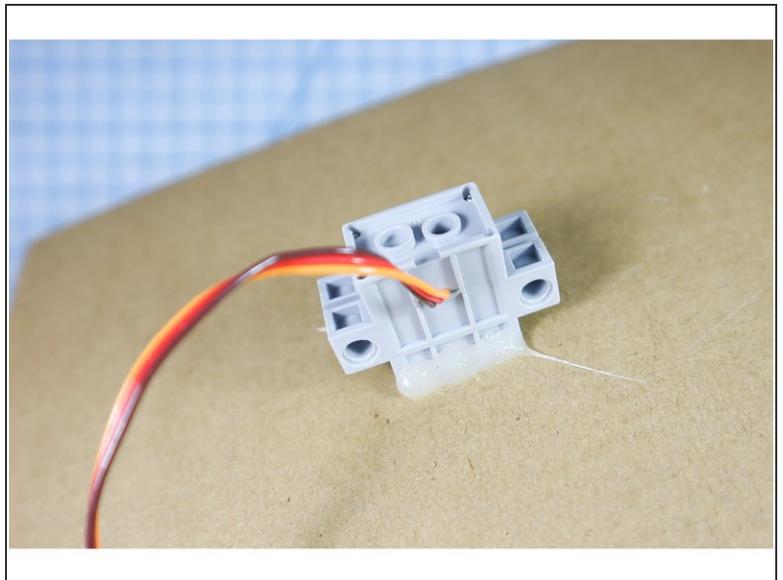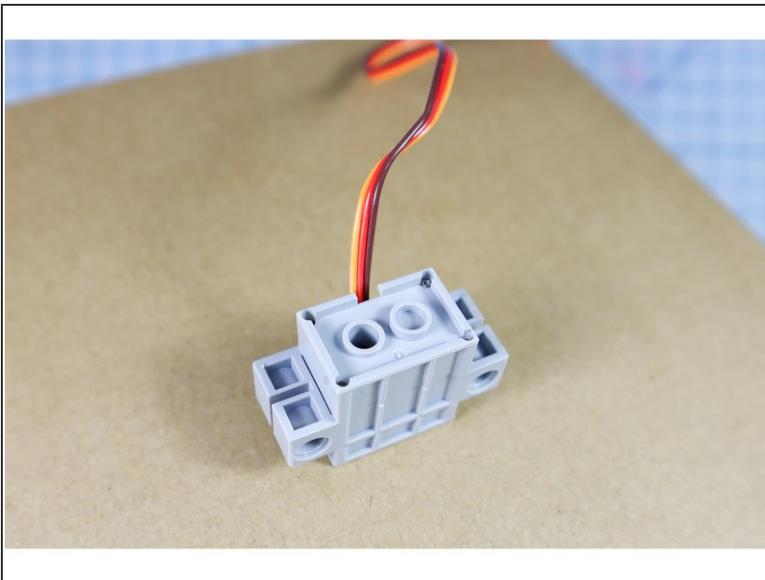


- Hot glue the motor in place.

## Step 5 — Glue the Gauge Face in Place



- Insert the gauge face over the motorhead and glue it to the cardboard with hot glue.

## Step 6 — Create the Box

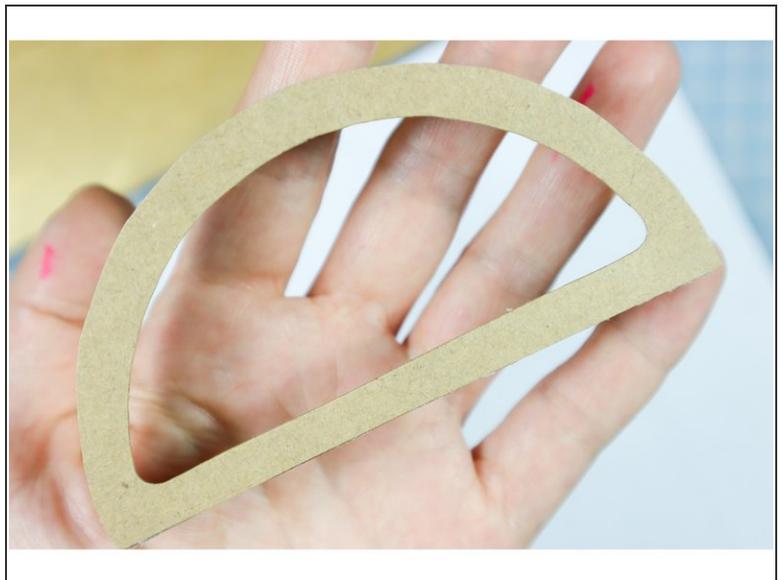

- Using hot glue, adhere the long strip to the round edge of the gauge and the short strip to the bottom. Only glue the interior of the box to keep the exterior looking tidy.

## Step 7 — Create the Dial Hand





- Cut out the dial hand from the template. If the paper isn't thick enough, trace the shape to a thicker material.
- Glue the LEGO piece to the back of the dial hand and paint the front and the edges to make it blend in.

## Step 8 — Paint the Box




- Paint the box its final color.

## Step 9 — Glue the Plastic in Place

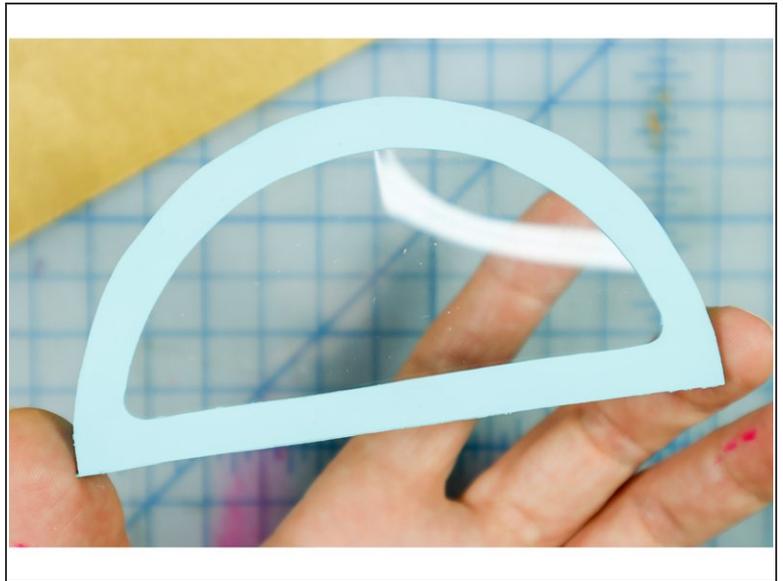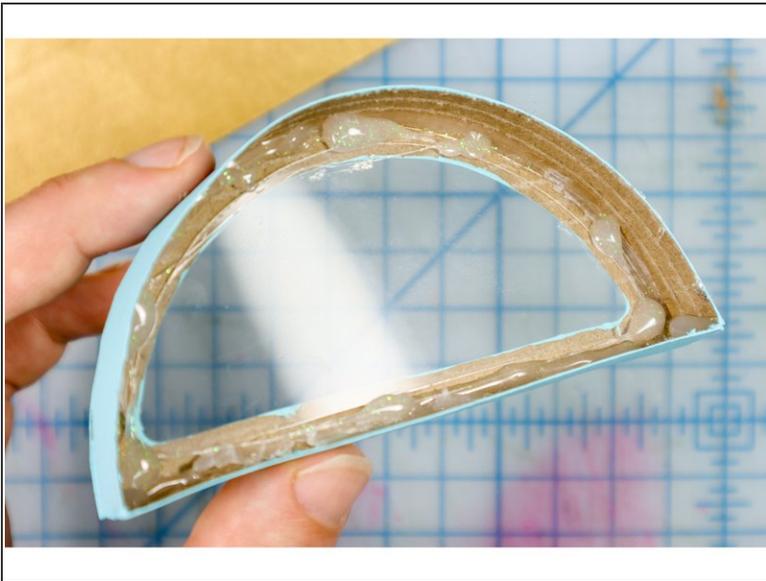


- Use hot glue to secure the plastic inside the window of the box. A few dabs of glue will work, just be sure to keep the glue away from the edge so that you can't see it from the front.

## Step 10 — Connect the Circuit

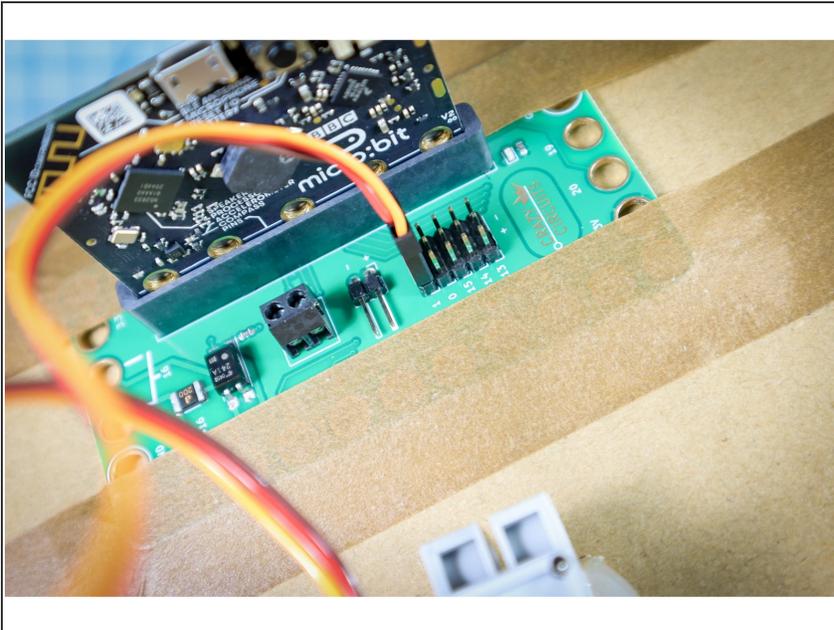


- Tape the bit board to the back of the cardboard.
- Connect the servo motor to pin 1, with the orange wire nearest the numbers. The red wire will then be in the + (positive) column and the brown wire will be in the - (negative) column.
- Insert the micro:bit into the bit board.

## Step 11 — Code the micro:bit

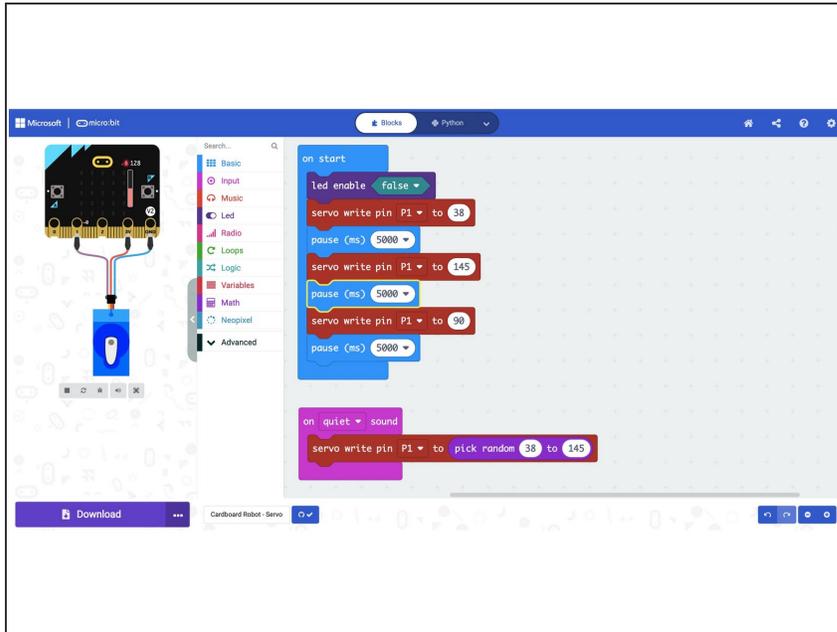

- Download the code, [available here](#).
- This code randomly moves the dial when a sound happens, like when someone claps.


## Step 12 — Put the Dial Together

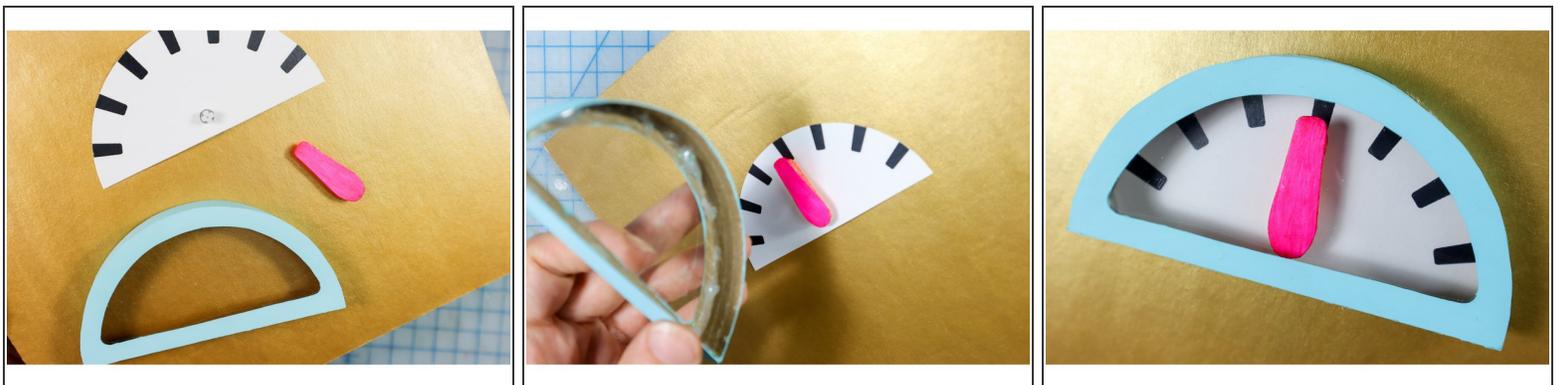

- Restart the code so that the dial goes to 90 degrees. Place the dial hand on the servo.
- Glue the box on top of the dial face with hot glue.



## Step 15 — Create the rest!

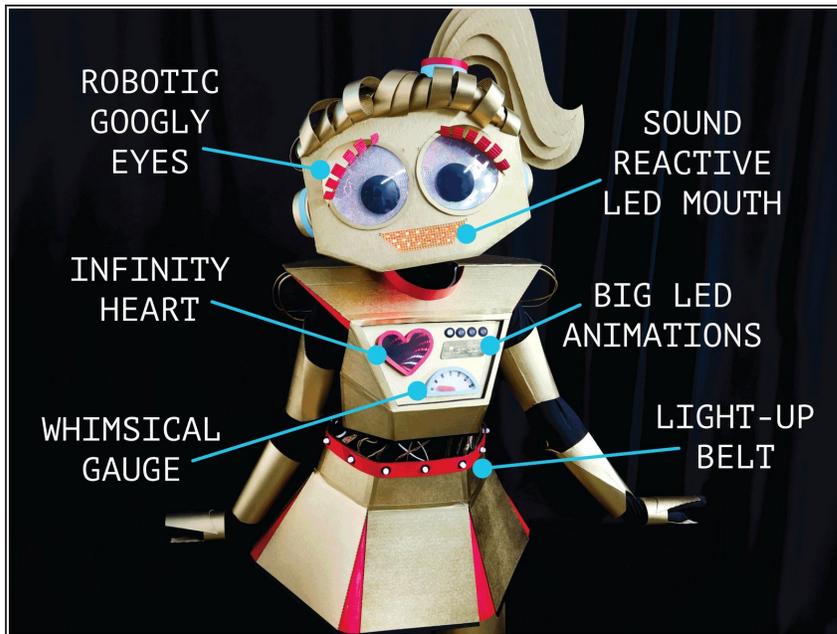

- Continue to build your Really Robotic Robot costume! For more, view these guides:
  - [Infinity Mirror Robot Heart](#)
  - [LED Belt](#)
  - [Sound Reactive Robot Mouth](#)
  - [Robotic Googly Eyes](#)
  - [LED Light Animations](#)